

# marvent Lp



Designed for simple,  
fast and effective  
installation



Please see reverse for  
installation instructions.

**NO LEAKS, NO FUSS**

# marvent Lp

- 1 Place roof vent PVC frame onto the glazing bars, above the lower glazing panel. Make sure it is centrally located between the glazing bars.



- 2 Apply a thin bead of silicone sealant to the lower glazing support bar.




- 3 Place the lower glazing panel onto the support bar, pressing it down to spread the silicone.

- 4 Apply additional beads of silicone along the edges of the glazing panel and the PVC frame.



- 5 Locate the PVC glazing connector cap and, working from one end to the other, press down firmly to engage the snap lock.

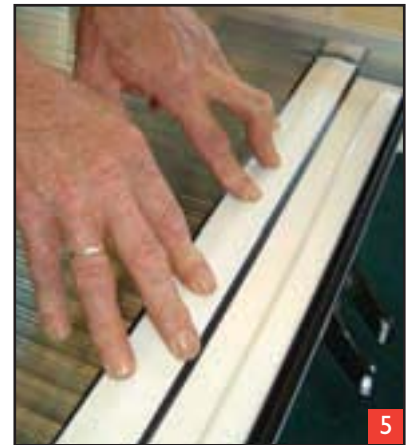

- 6 Repeat steps 2 and 5 on the upper glazing panel junction.



- 7 It is recommended that a short bead of silicone is applied over the connector cap gaskets at the points where the glazing bar capping seals make contact with them.



- 8 Wipe any excess silicone off after the glazing bar capping has been fitted.



- 9 The sash must be held at about 95° to the plane of the roof to engage onto the hinge. Hook the outer channel, on the underside of the frame, onto the aluminium hinge as shown and rotate the sash to the closed position to engage the hinge.