


Crescent Curved Roof Canopy

501x363x242cm / 16'5"Lx11'10³/₄"x7'11¹/₄"

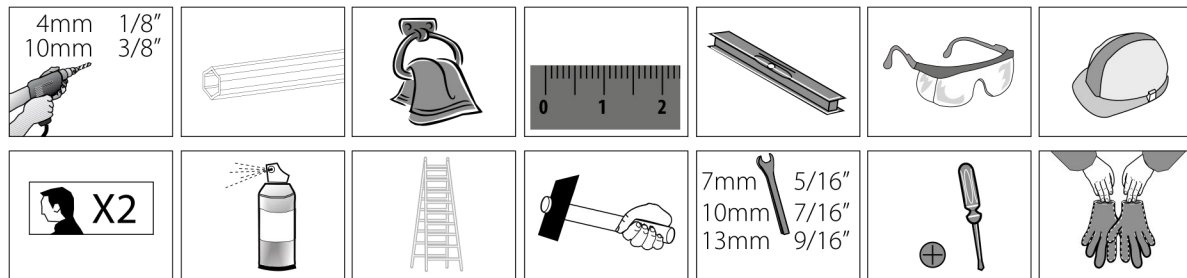

the
glazing shop

T: 01536 446395

E: sales@theglazingshop.co.uk

W: www.theglazingshop.co.uk

IMPORTANT

Please read these instructions carefully before you start to assemble this canopy.
Please carry out the steps in the order set out in these instructions.
Keep these instructions in a safe place for future reference.

▷ Care and Safety advice

- Please follow the instructions as listed in this manual.
- Sort the parts and check against the list of contents.
- For safety purposes we strongly recommend that the product will be assembled by at least two people.
- Some parts have metal edges. Please be careful when handling components. Always wear gloves, shoes and safety goggles during assembly.
- Do not attempt to assemble the canopy in windy or wet conditions.
- Dispose of all plastic bags safely – keep them out of reach of small children.
- Keep children away from the assembly area.
- Do not attempt to assemble the canopy if you are tired, have taken drugs, medications or alcohol, or if you are prone to dizzy spells.
- When using a stepladder or power tools, ensure that you follow the manufacturer's safety advice.
- Do not climb or stand on the roof.
- Heavy articles should not be leaned against the poles.
- Do not hang or lay on part 216.
- If you are unsure if you require planning permission contact your local council.
- Keep roof and gutters clean of snow, dirt & leaves.
- Heavy amounts of snow on roof can damage the carport making it unsafe to stand below or nearby.
- This product was designed and produced for domestic use only.

▷ Some versions of this carport are painted.

If color was scratched during assembly it can be fixed with the following tints:

White – RAL 9016

Gray – RAL 7012

▷ Cleaning instructions

When your canopy needs cleaning, use a mild detergent solution and rinse with cold clean water.

Do not use acetone, abrasive cleaners, or others special detergents to clean the panel.

▷ Before stating assembly

- This carport must be assembled on a solid base (such as concrete or asphalt).
- Choose your site carefully before beginning assembly. Site surface (mainly below poles) needs to be level.
- During assembly use a soft platform below the parts to avoid scratches and damages.


▷ TOOL



▷ Notes (by steps)




Step 7: Screw 4000 intended to keep the parts (gable) stable till gutters will be assembled. If a third person can hold the parts till step 8, this screw can be assembled with all the others at step 33.

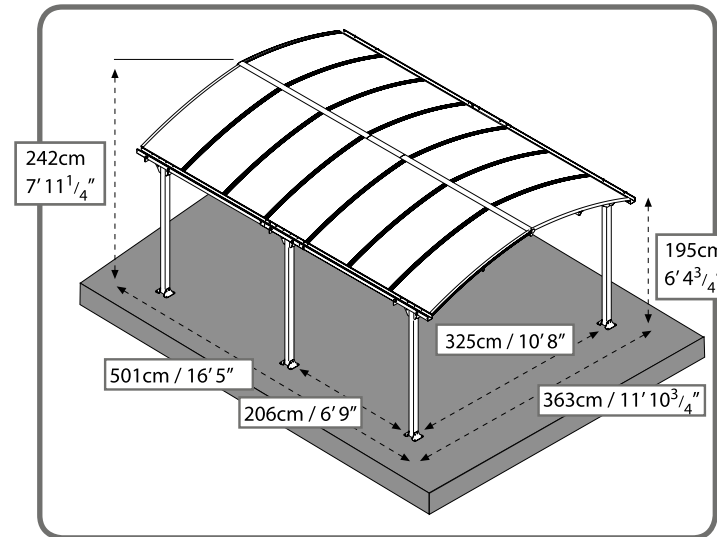


During assembly some screws are fastened fully by wrench while others are fastened just after the whole carport is assembled and leveled (step 21).
















Notice the marks on each step:

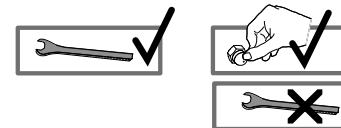


This carport should be assembled on a solid base (such as concrete). Without solid base, pre-foundation, that will include concrete and metal, is needed as in this drawing

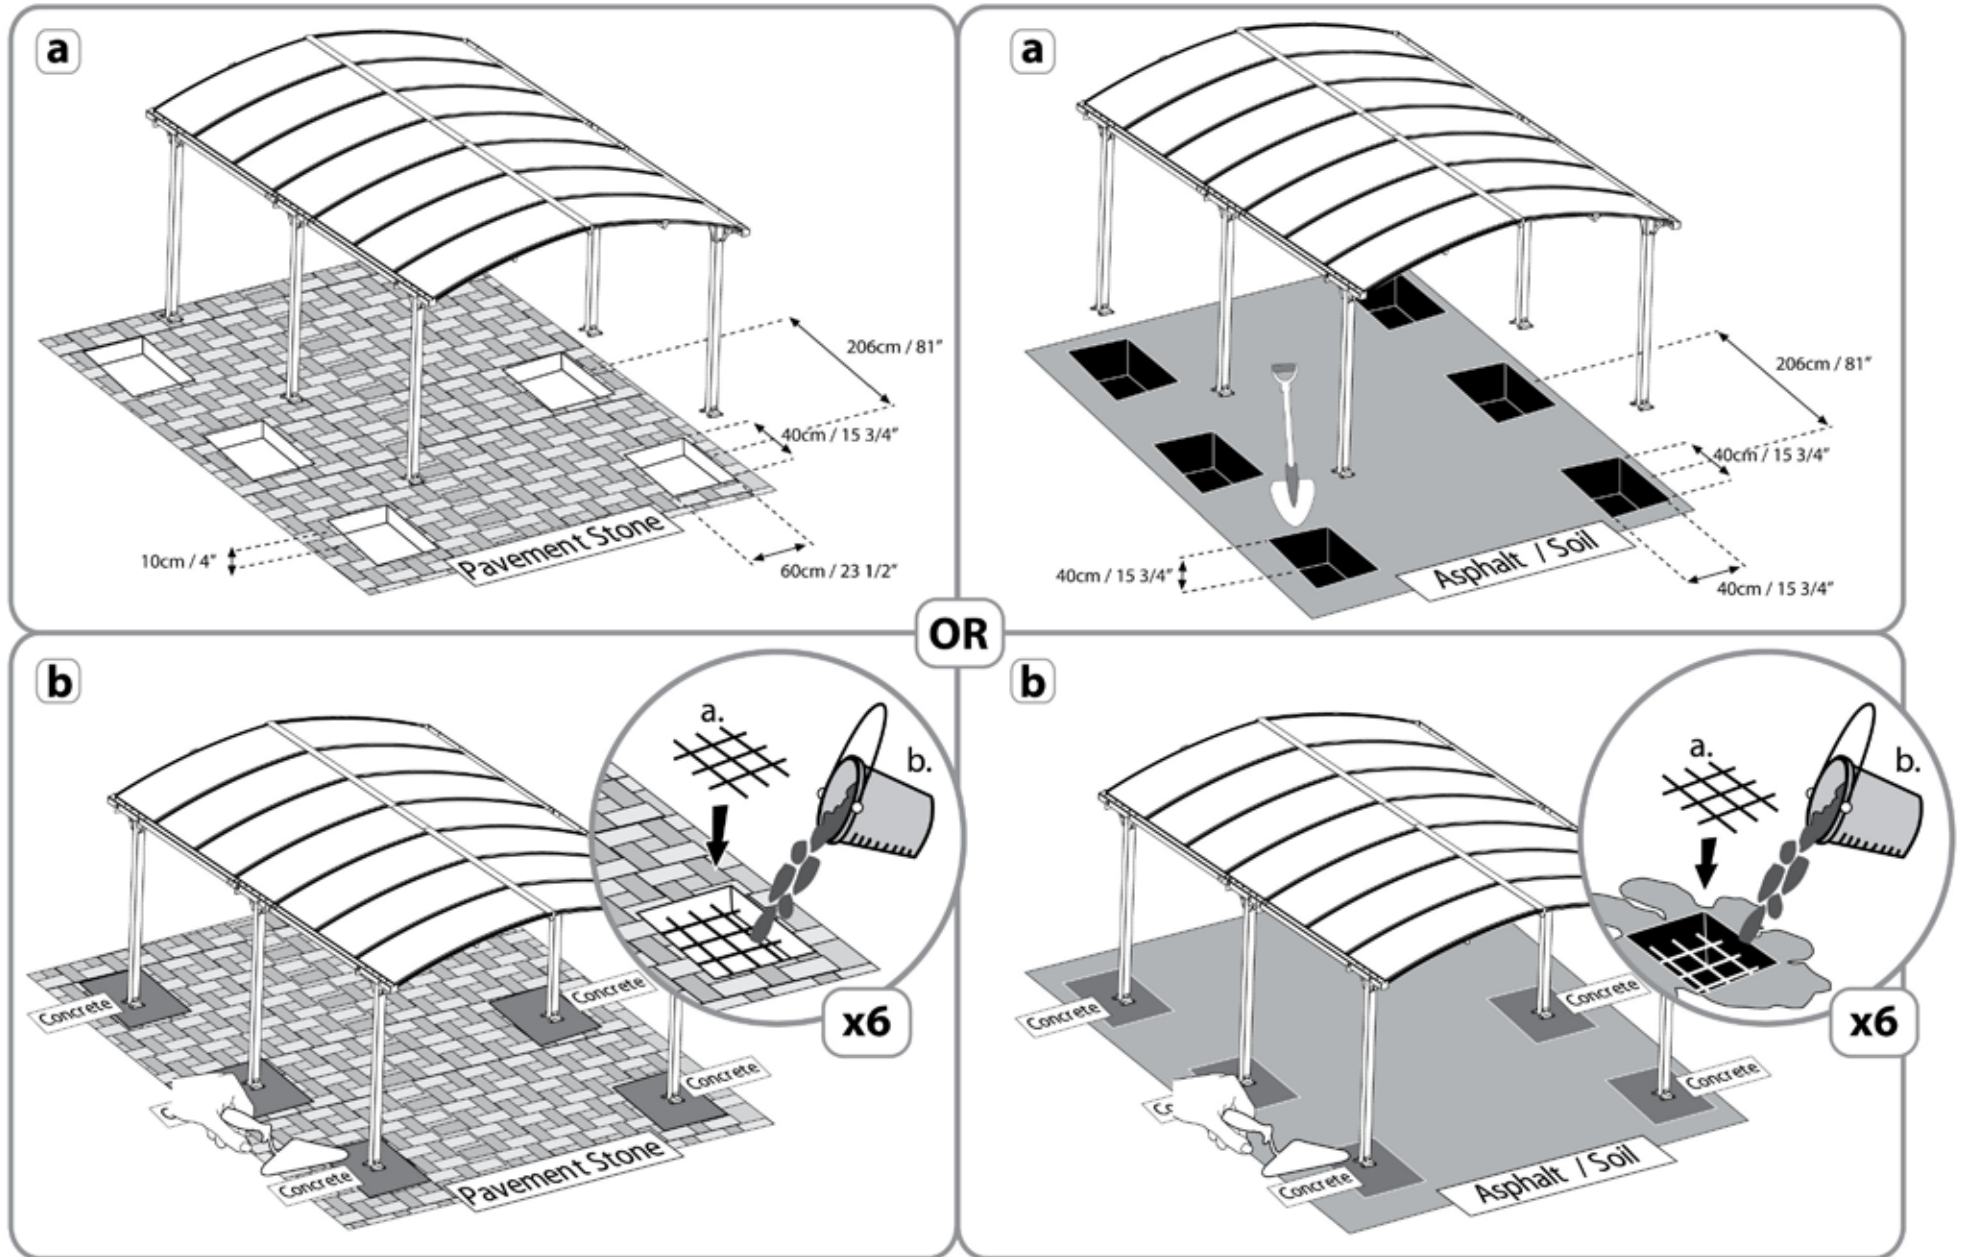



Contents

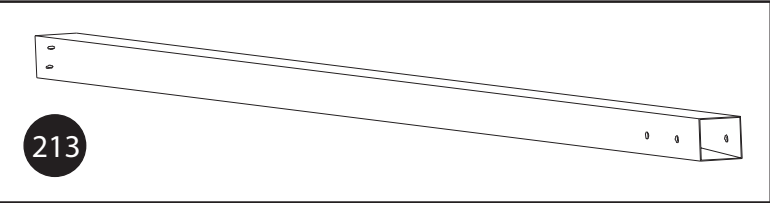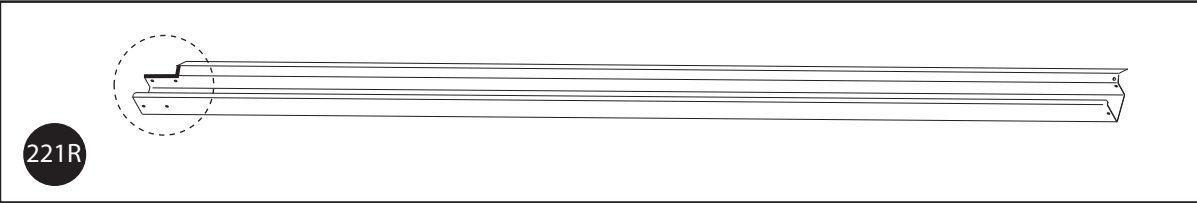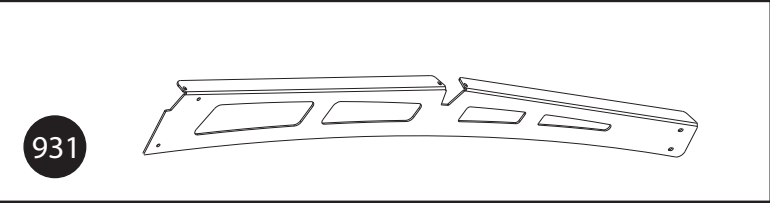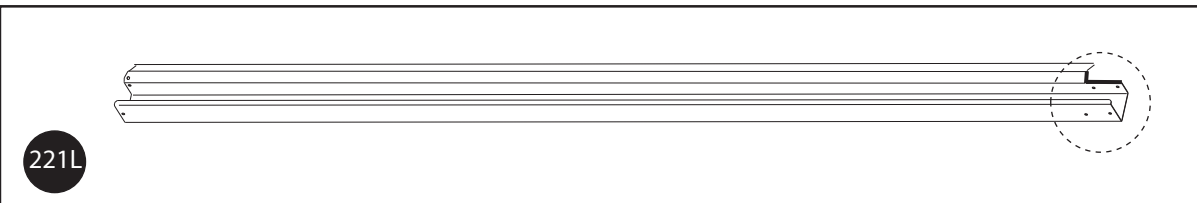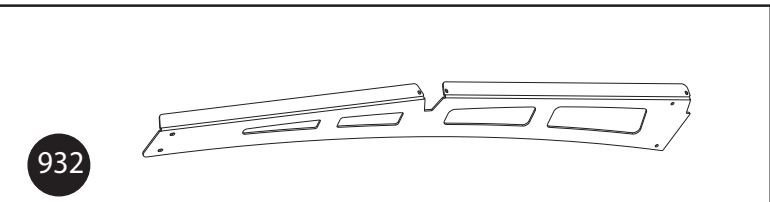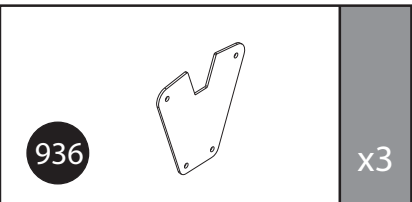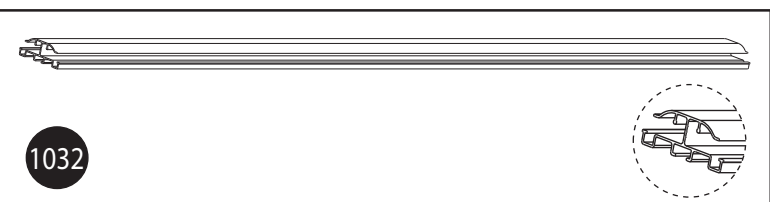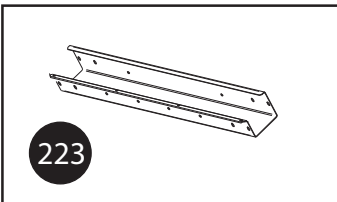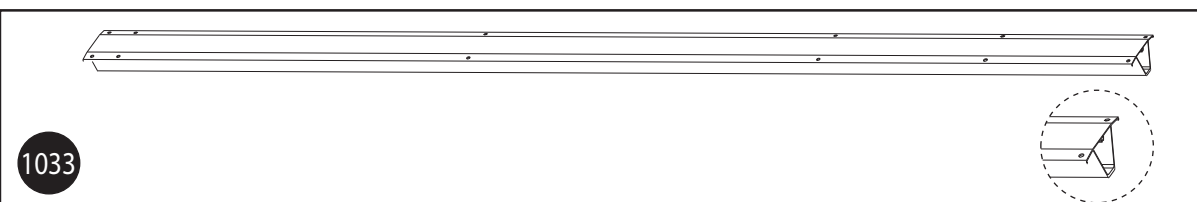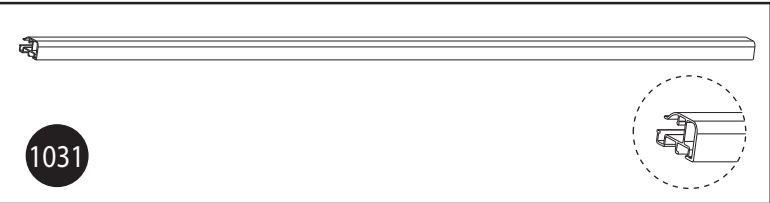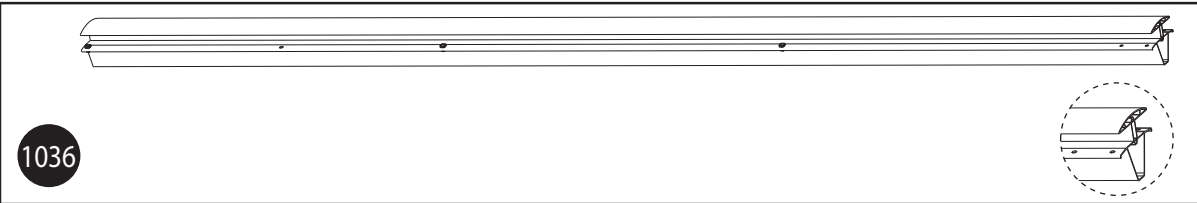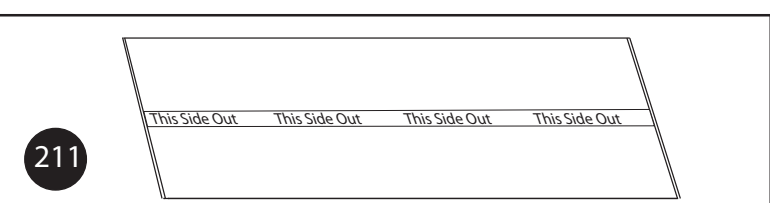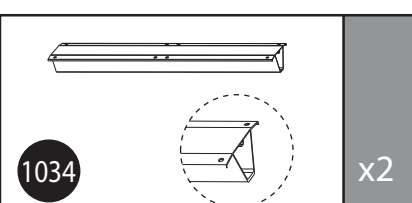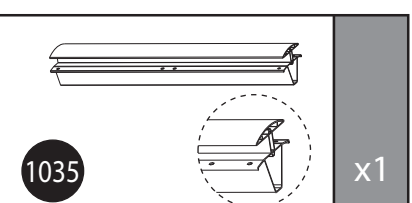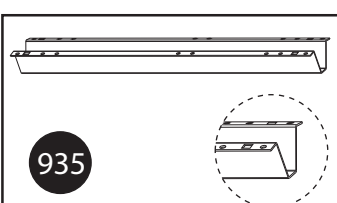

Item	cm/Inc	Qty.	Item	cm/Inc	Qty.
		x6			x2
		x3			x2
		x3			x3
		x12			x2
		x4			x4
		x2			x14
		x2			x1
		x3			





Contents




Item	cm/Inc	Qty.
933		x6







934		x6
-----	---	----






212		x12
-----	---	-----




4010		spare x25 x1
4000	90mm / 3 ³ / ₄ " 	spare x25 x1




Item	cm/Inc	Qty.
424	M8 100mm / 4" 	spare x25 x1
433	M8 	spare x100 x4
414	M8 	spare x39 x3
4038	M8 25mm / 1" 	spare x13 x1




4040	M10 	spare x25 x1
4041	M10 	spare x13 x1
4039	M10 25mm / 1" 	spare x13 x1

Item	cm/Inc	Qty.
410	M6 	spare x4 x1
411	M6 	spare x44 x4
416	M6 	spare x114 x4
466	M6 	spare x159 x5
426	M8 	spare x13 x1
425	1/4 	spare x118 x4


Item	cm/Inc	Qty.
1037		x2
1038		x2
1039		x2
1040		x4
450	32mm / 1 ¹ / ₄ " 	spare x8 x1

54		x2
226		x4
225		x4

T001	7 ³ / ₄ / 20 	x1
M6		

421	M4 16mm / 5/8" 	spare x59 x3
427	M4 	spare x59 x3
422	M4 	spare x59 x3

1

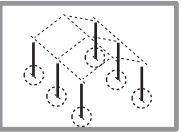

213x6

933x6




934x6

212x12


414x24

433x48


424x24

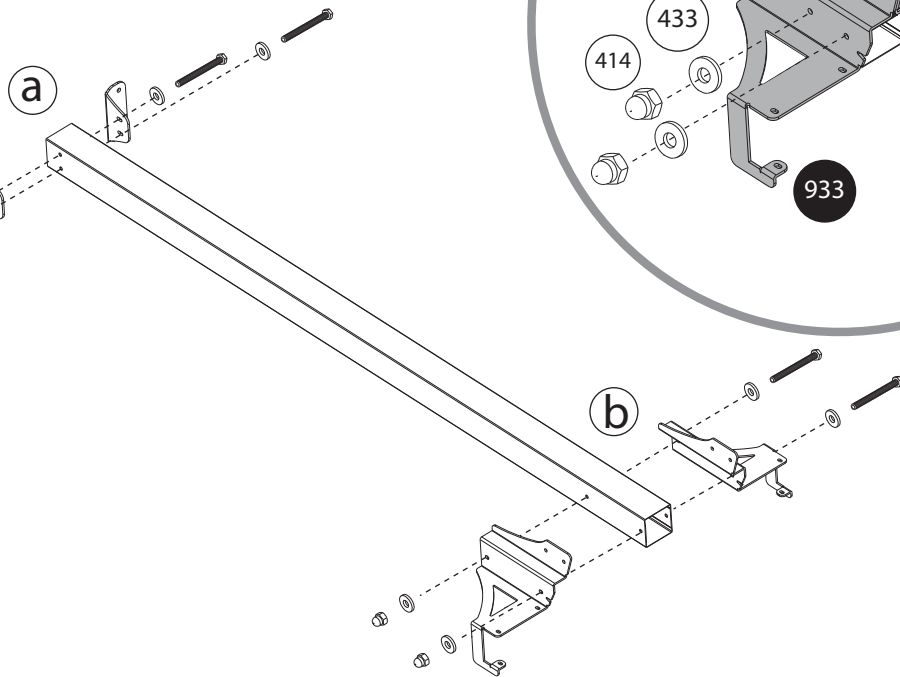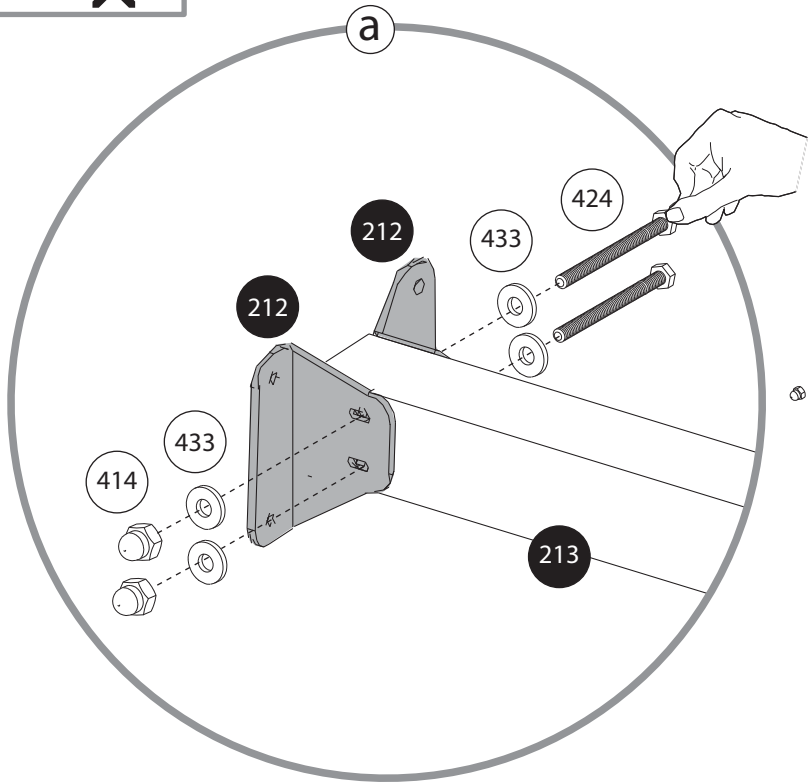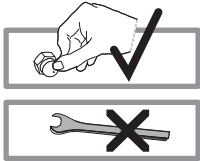


x6

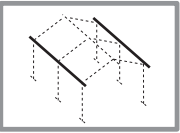

- 221L x2
- 221R x2
- 223 x2
- 1037 x2
- 1038 x2
- 416 x24
- 425 x24
- 466 x24

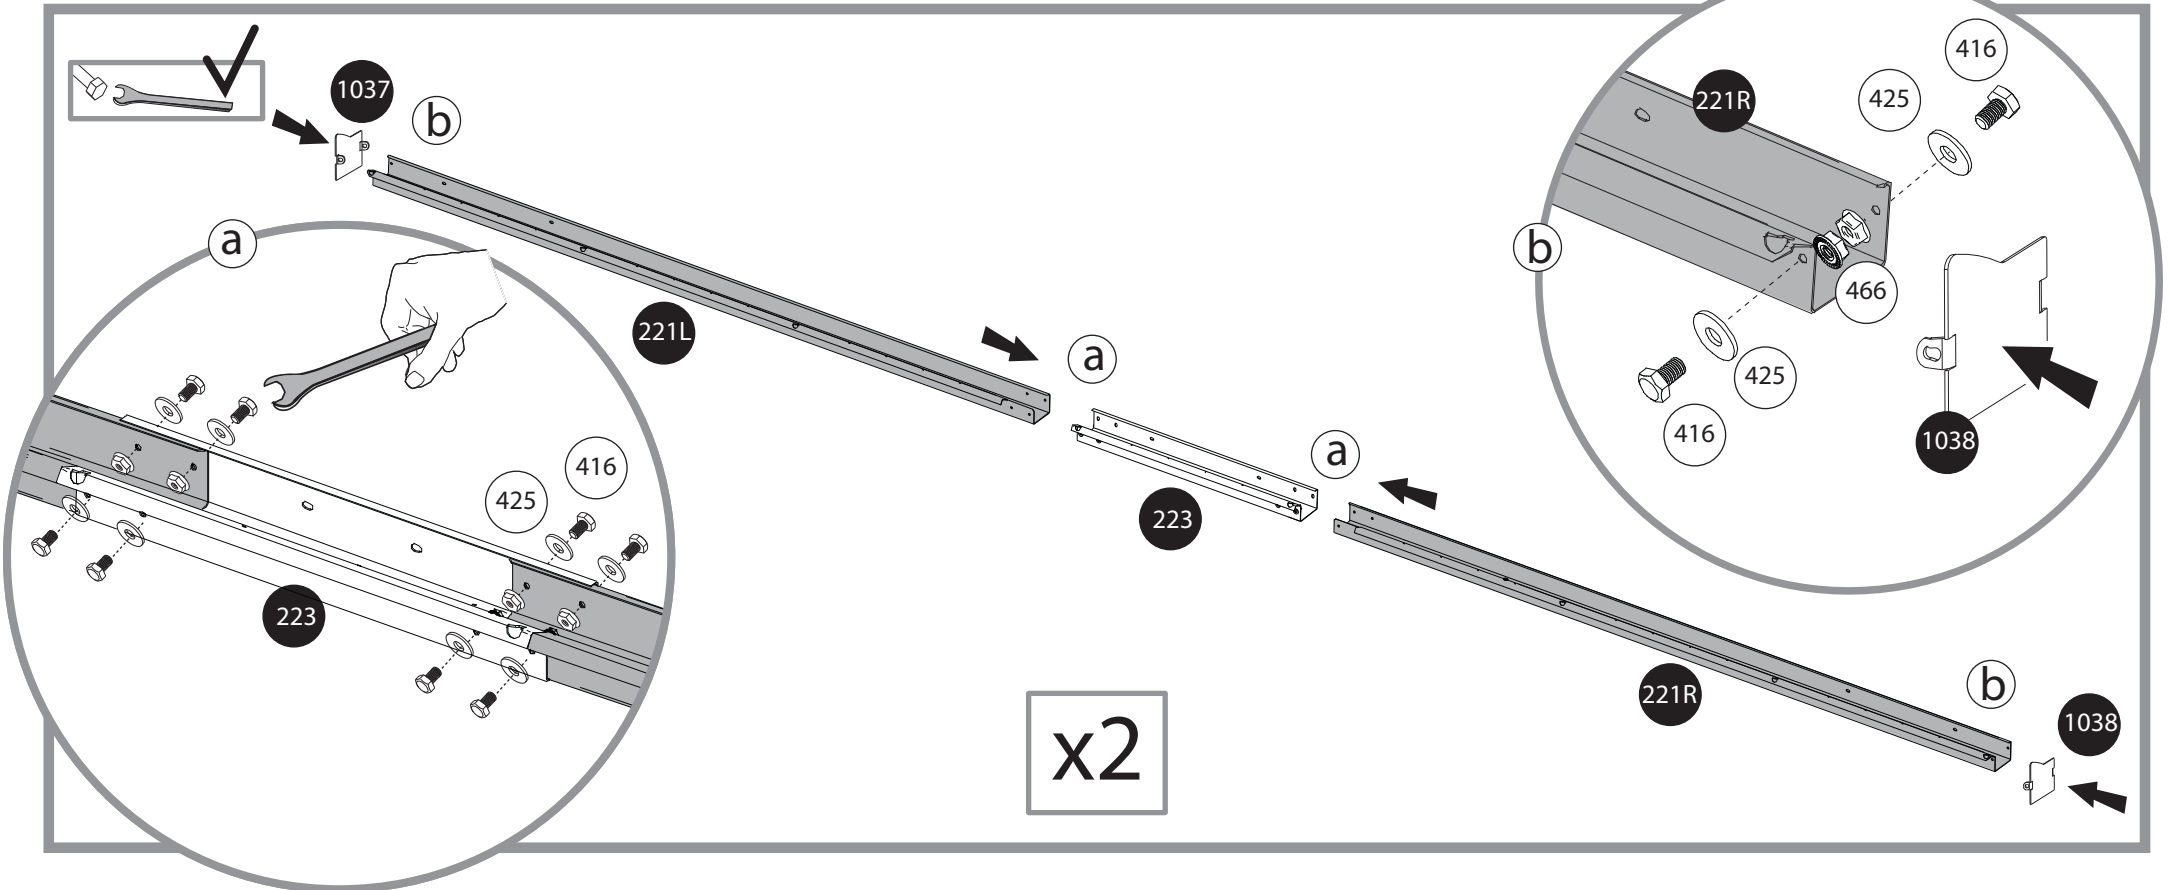



3

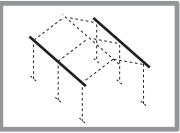


226 x4



225 x4

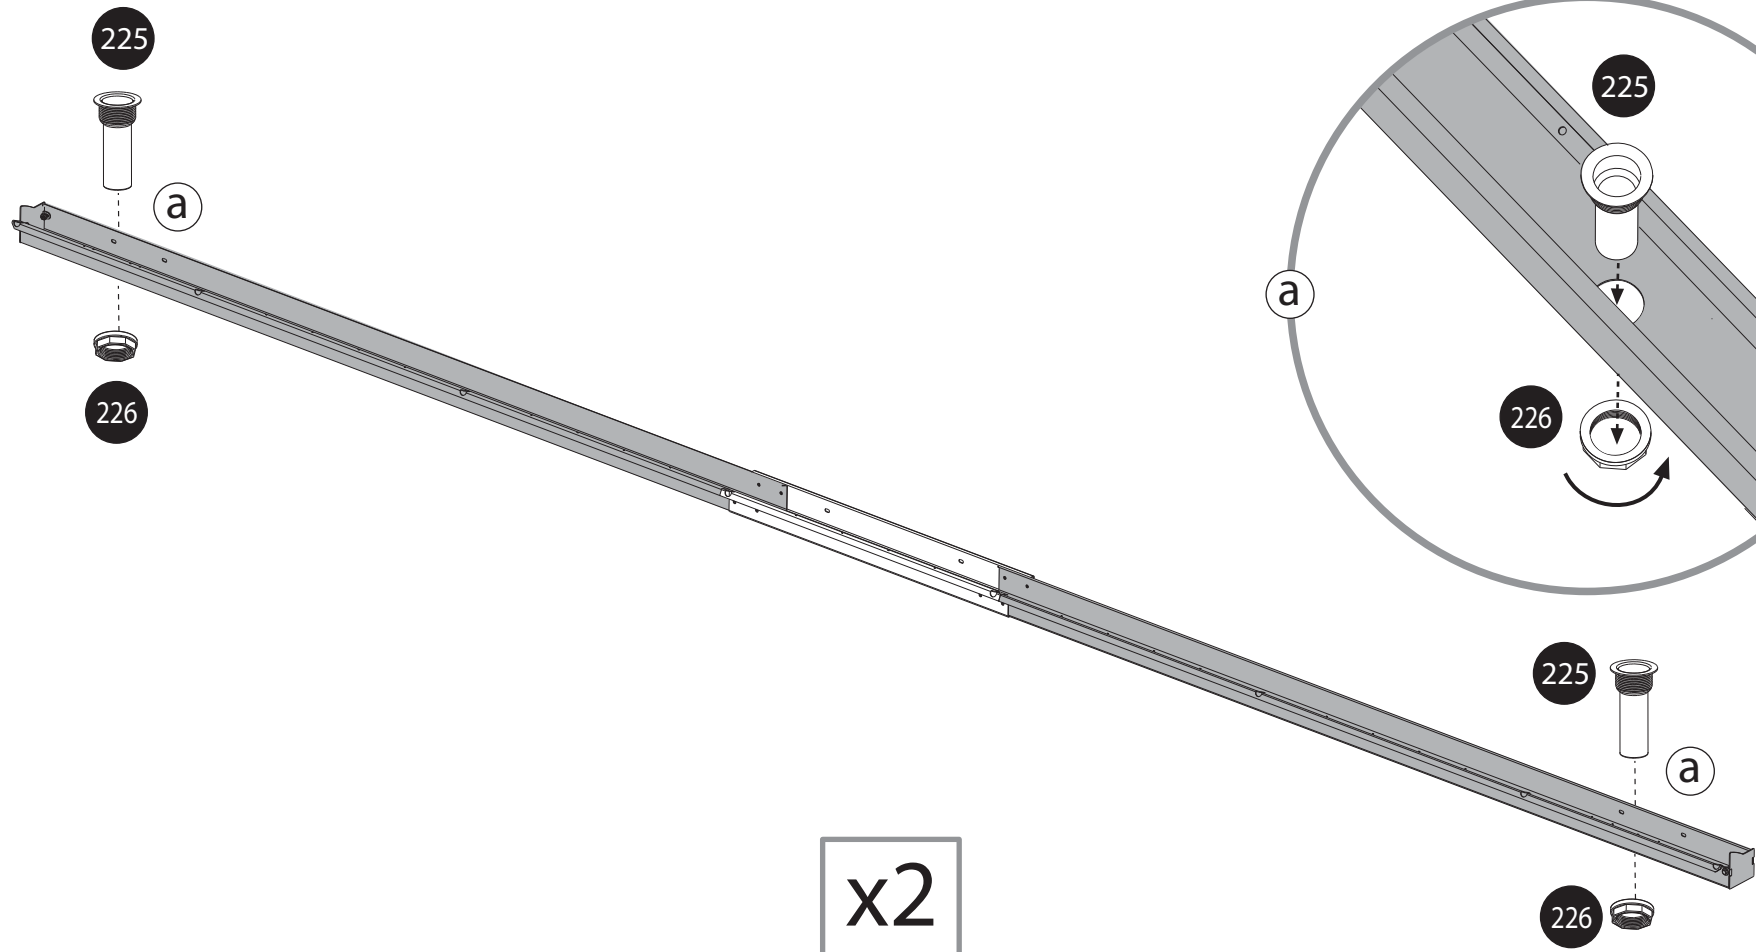

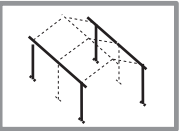

416



x24

466






x24

425




x24

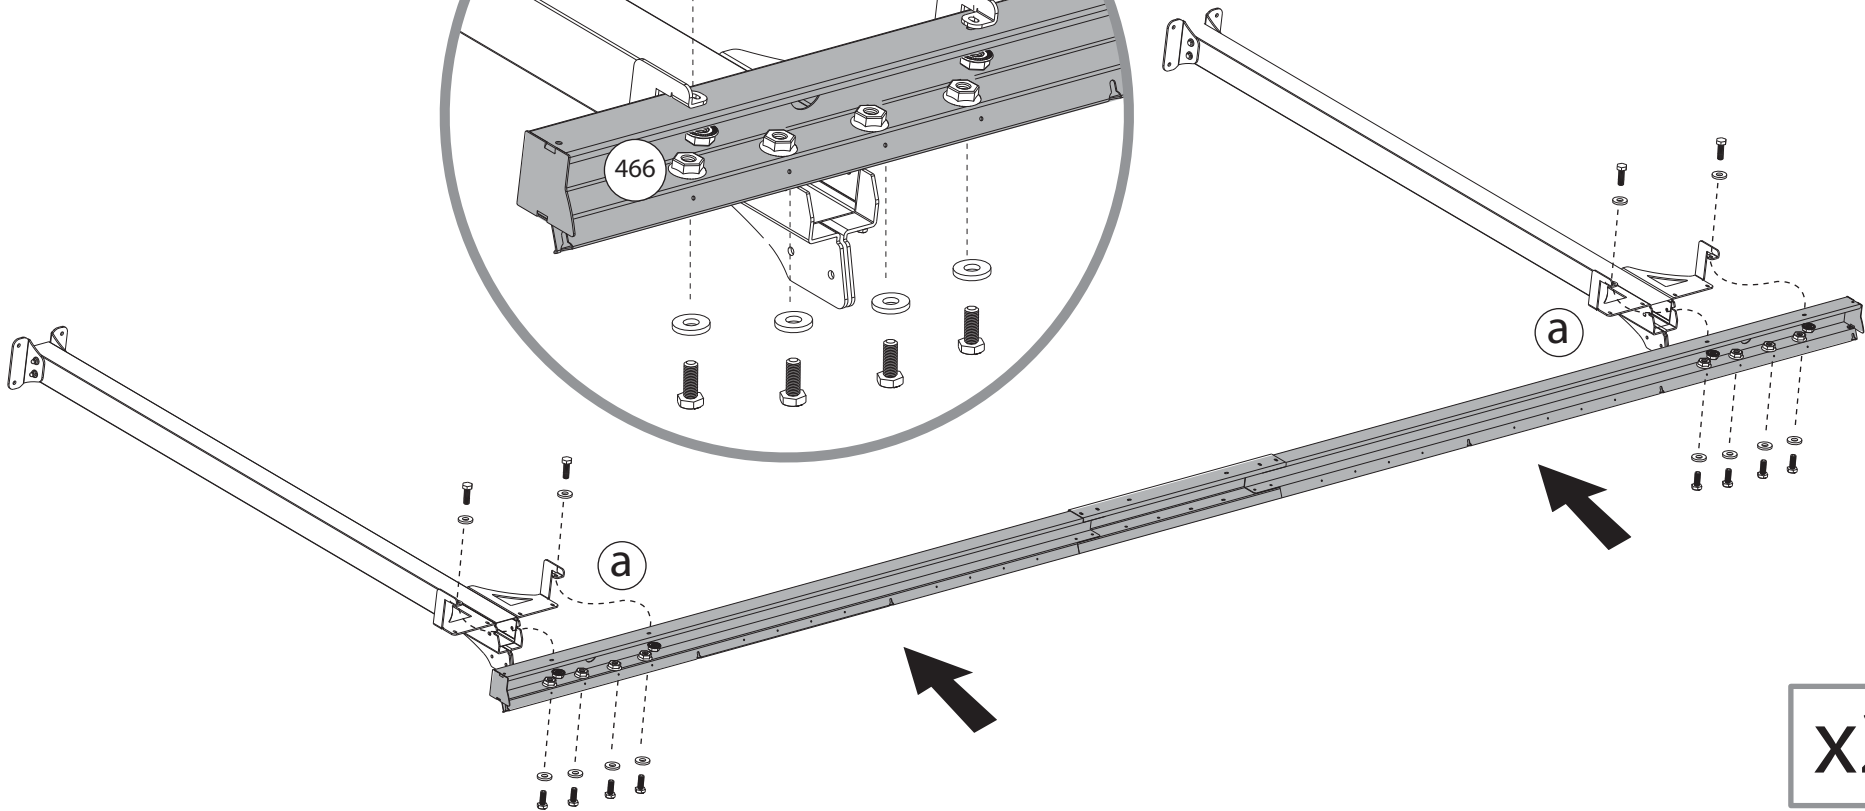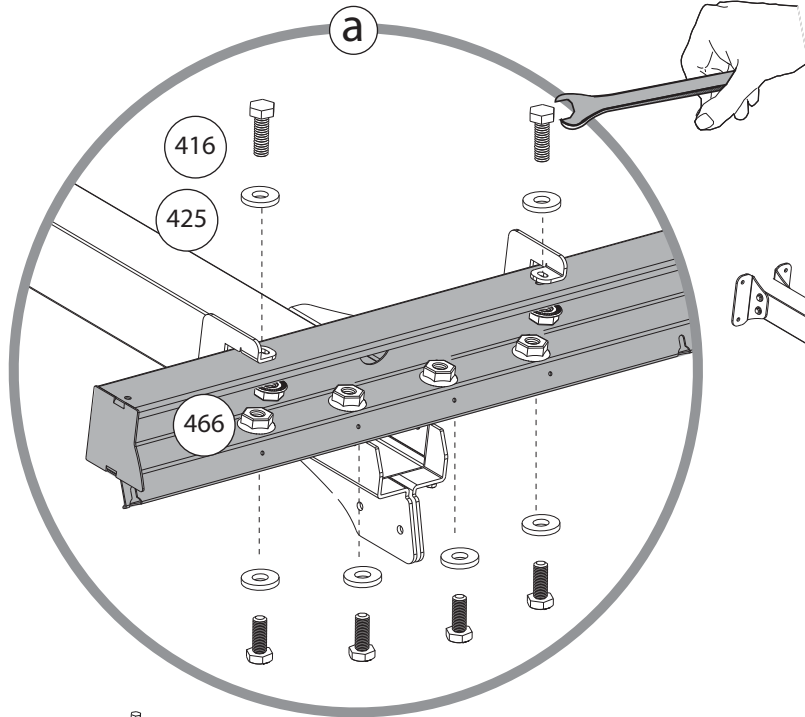

X2

x2

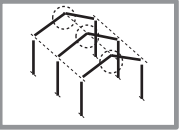

931 x3


936 x3

4039 x12


932 x3

4040 x24

4041 x12

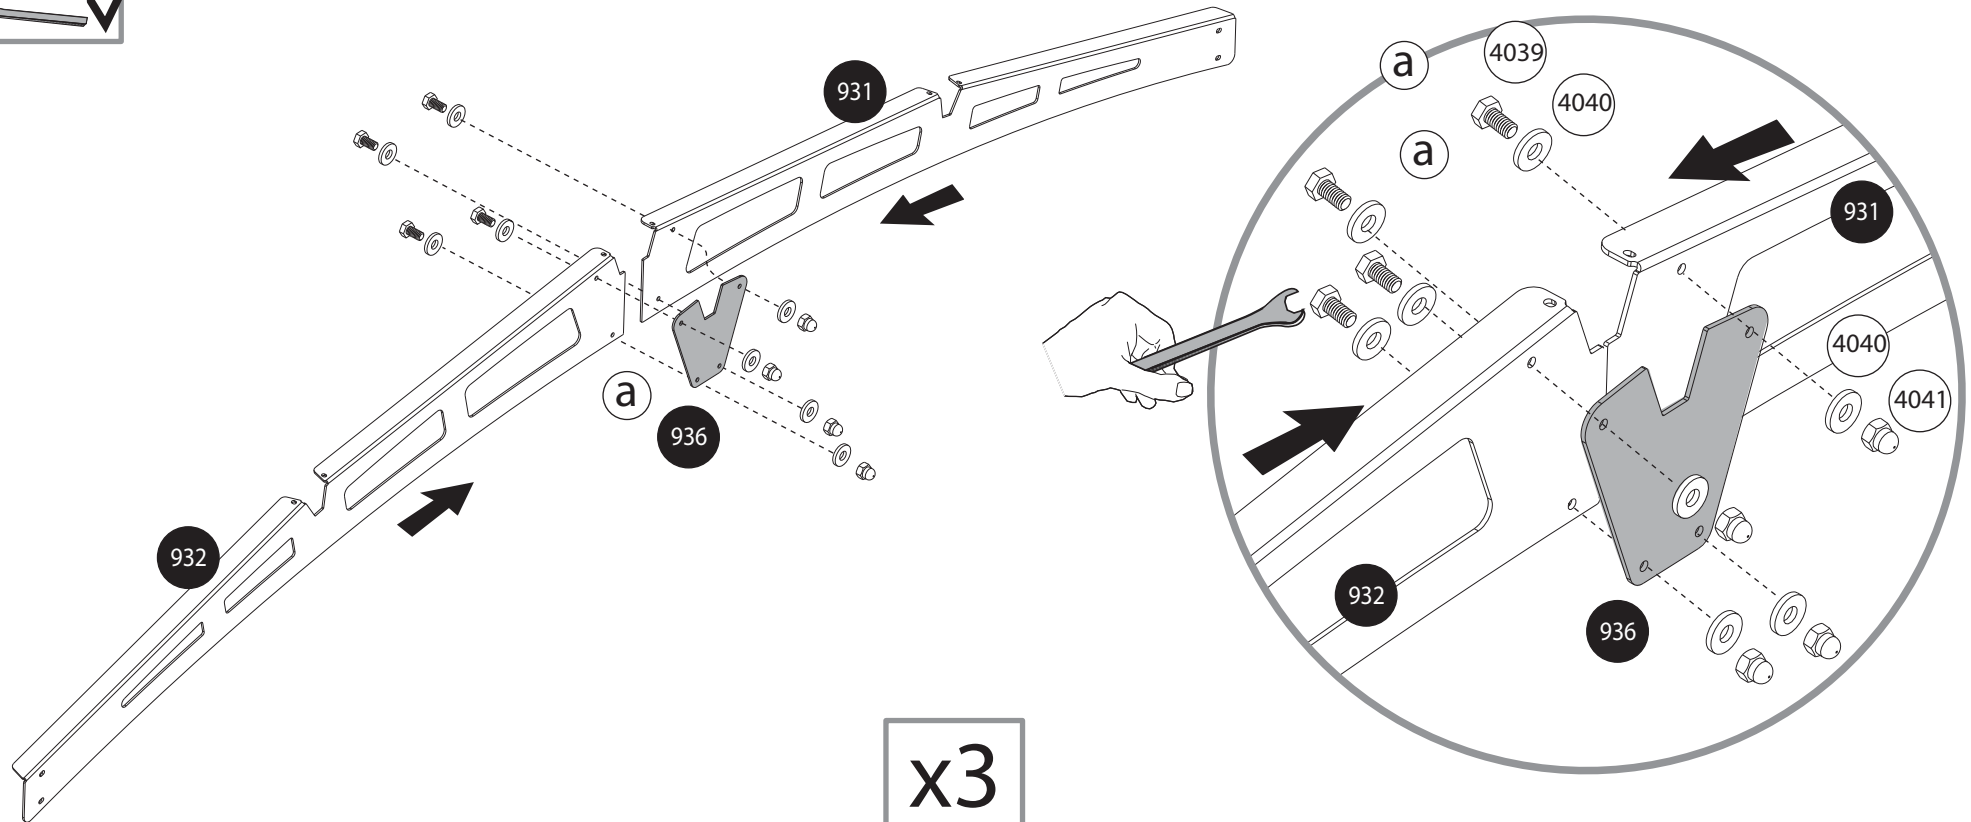


x3

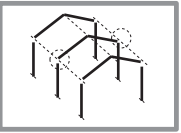

4038 x4


433 x8

414 x4




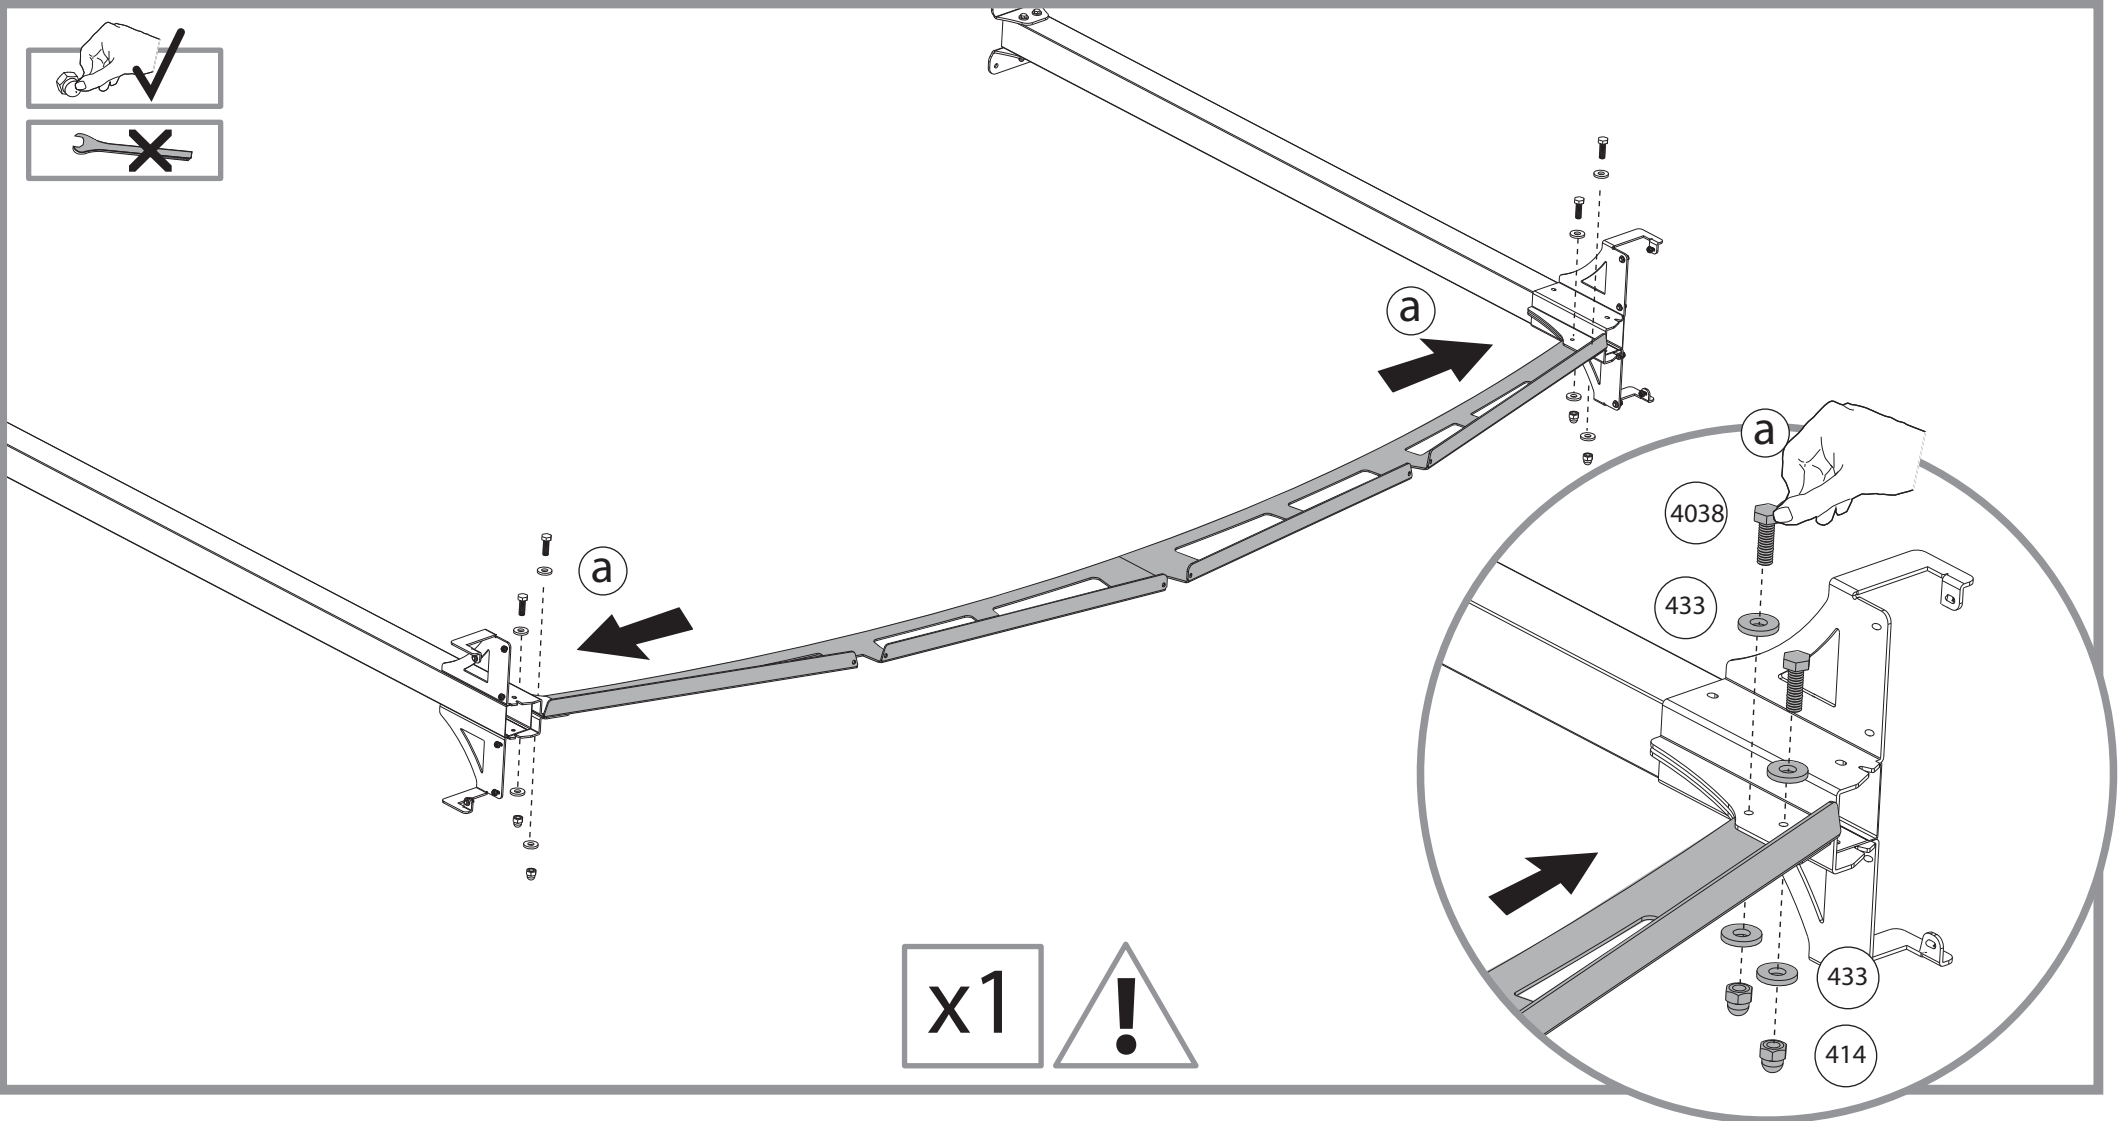



x1



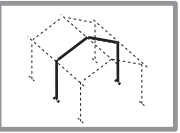

- 433  x2
- 4010  x2
- 4000  x2

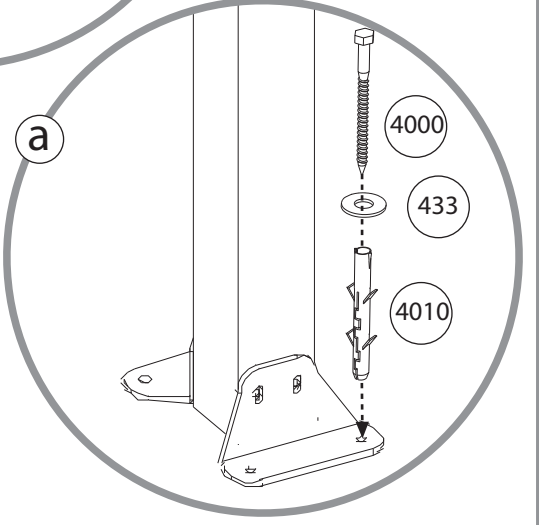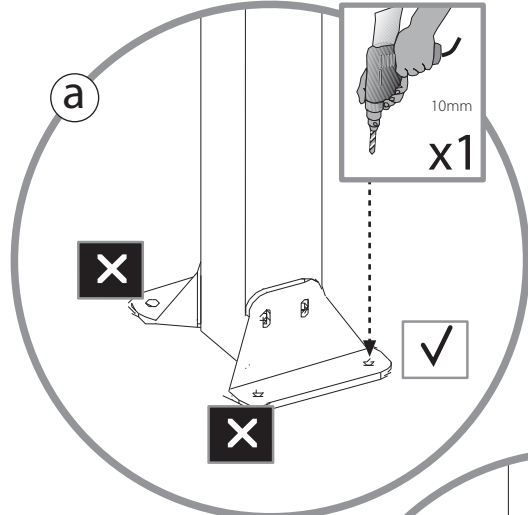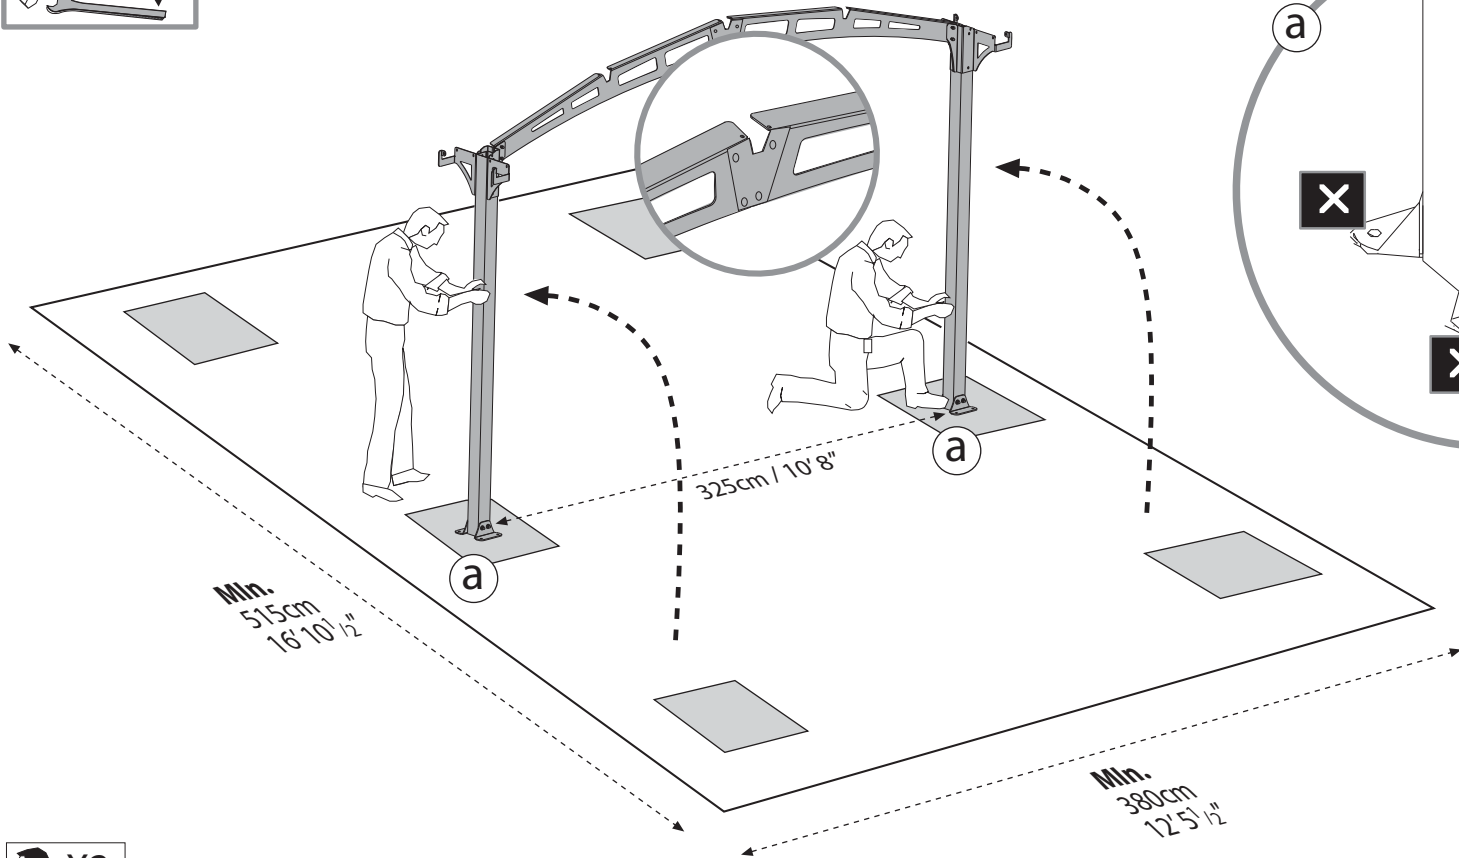

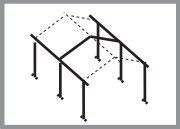

416



x12

466






x12


425



x12

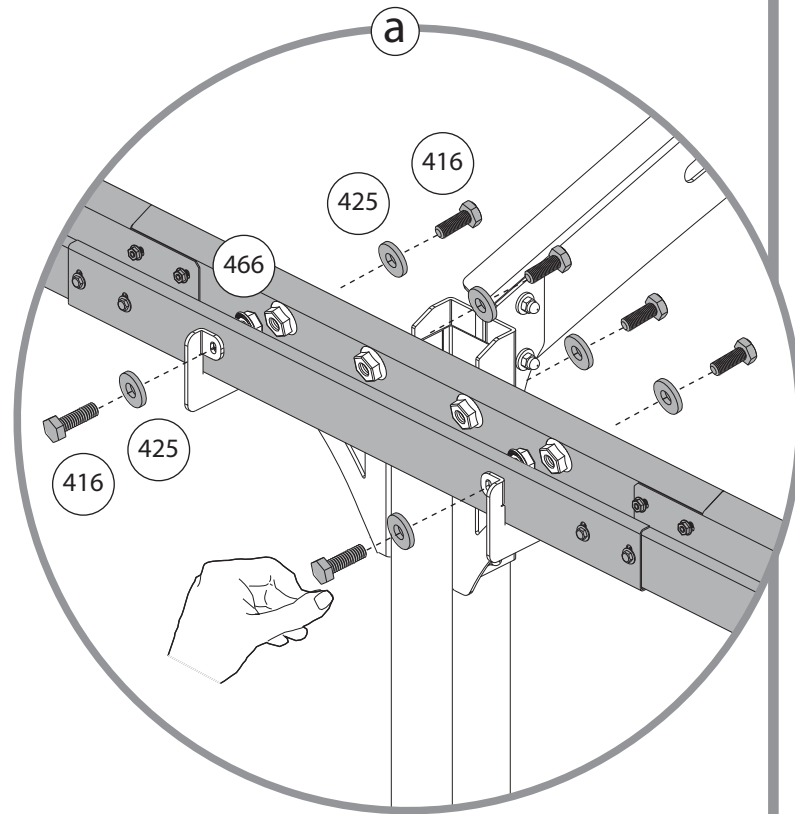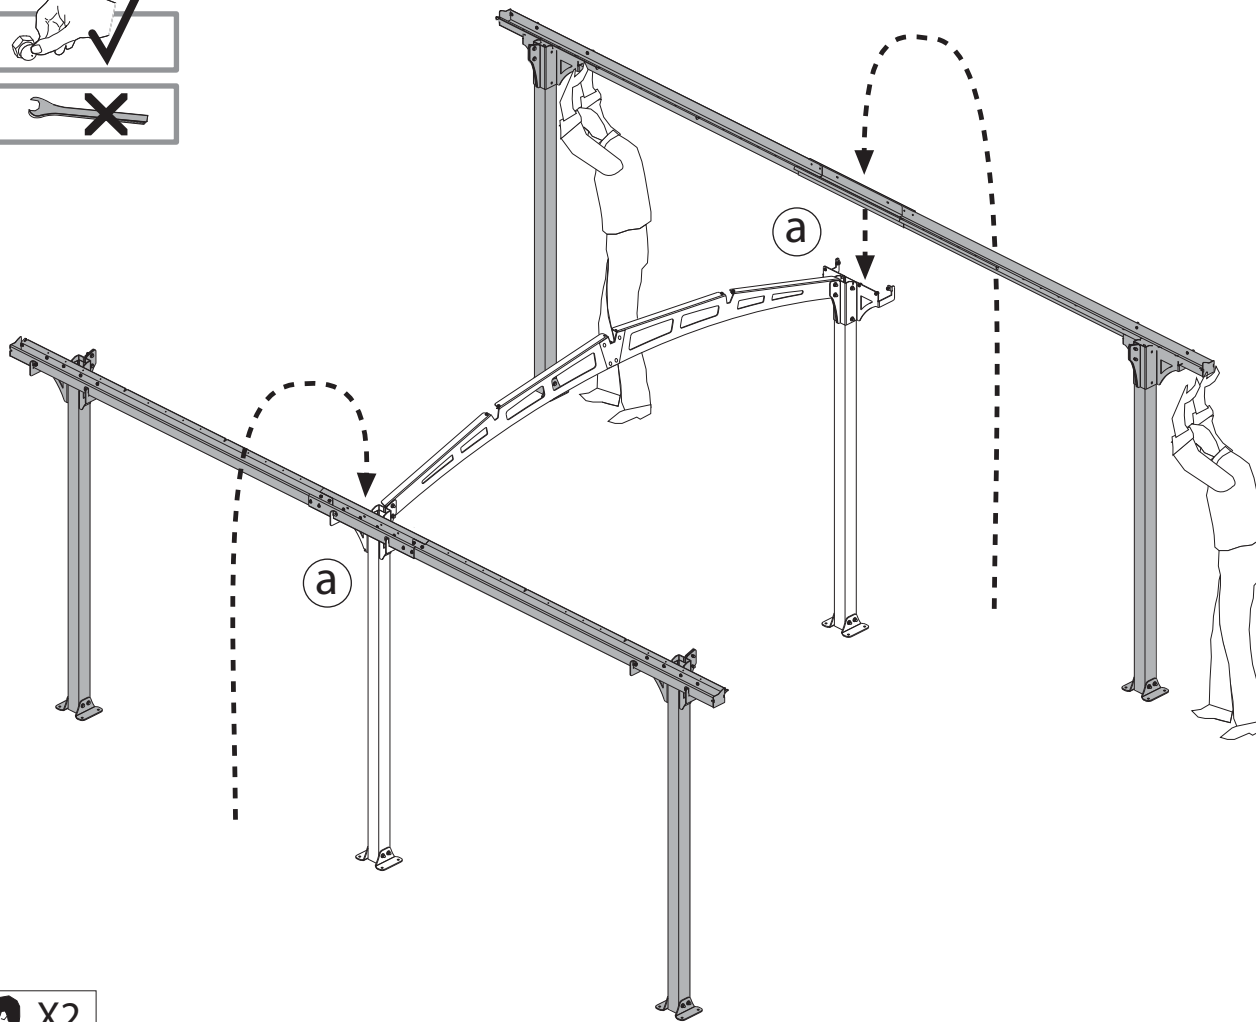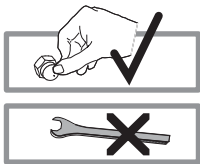

X2

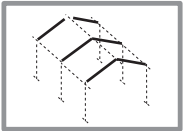

4038



x8

433







x16

414



x8

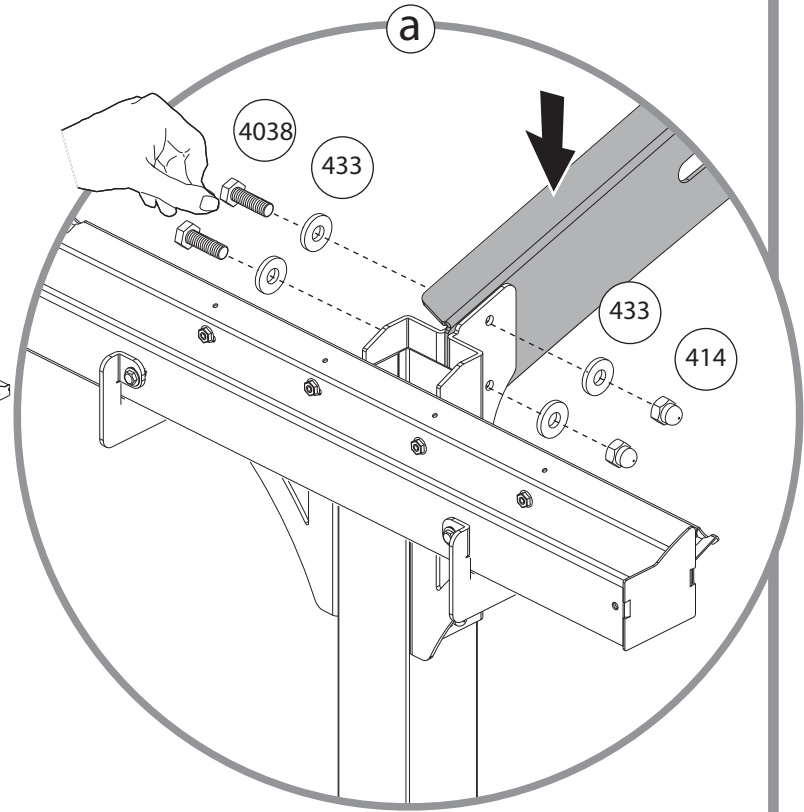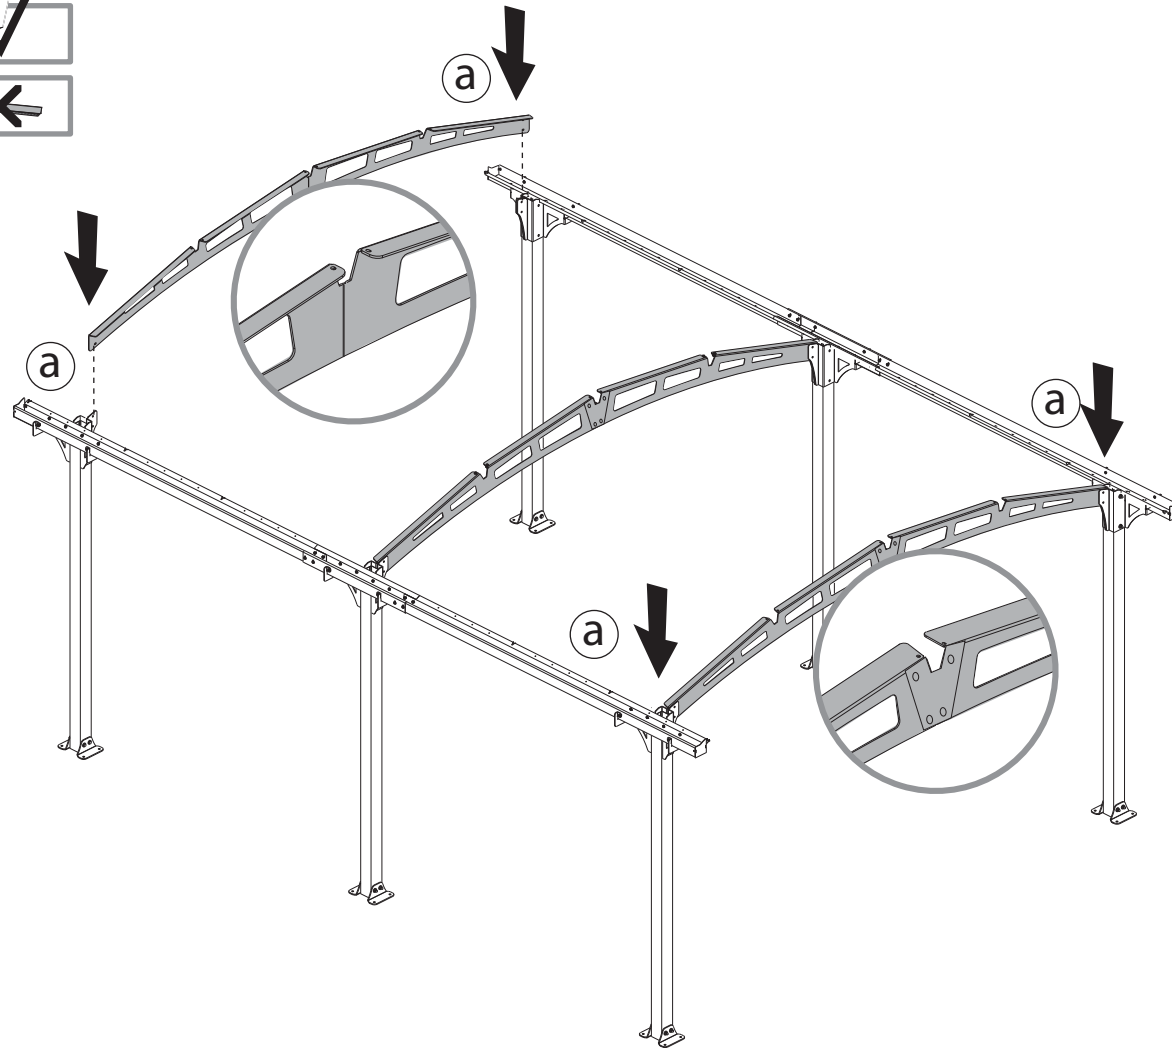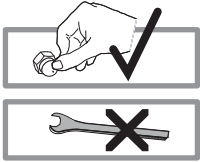

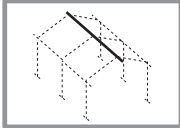



1035 x1





935 x1


416 x4

425 x4

466 x4

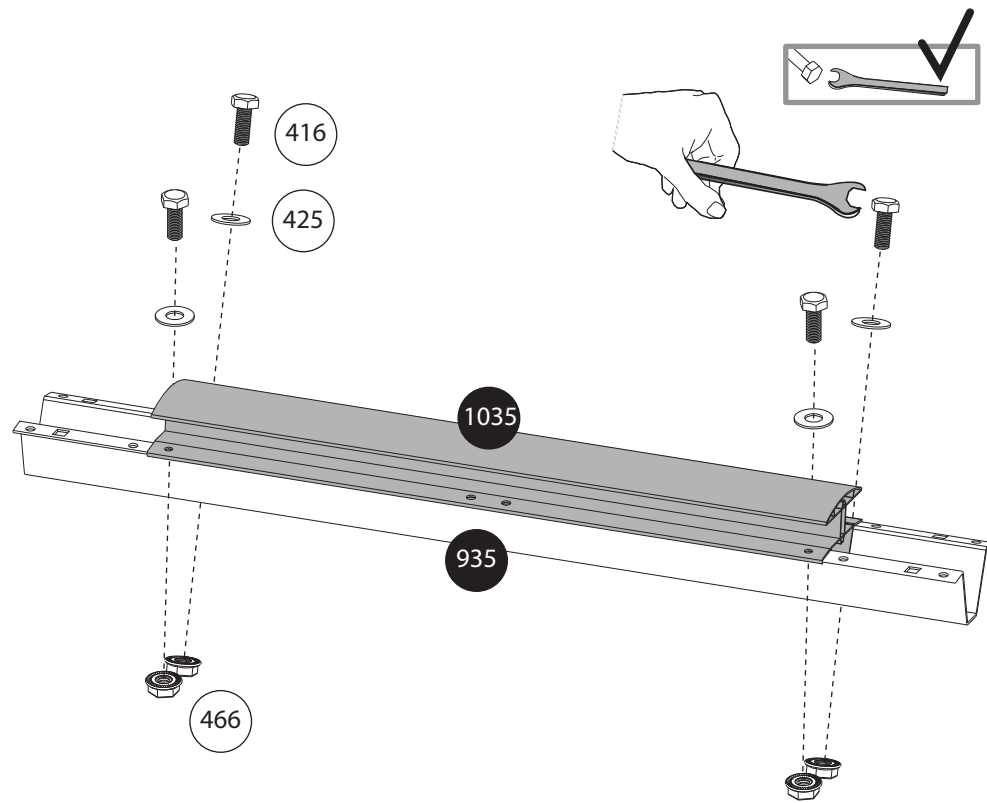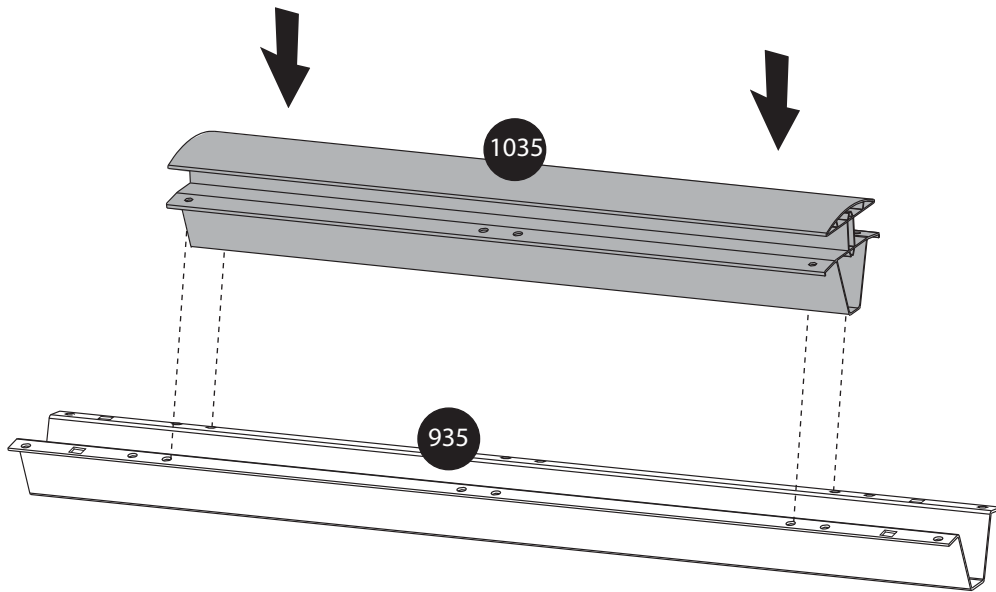

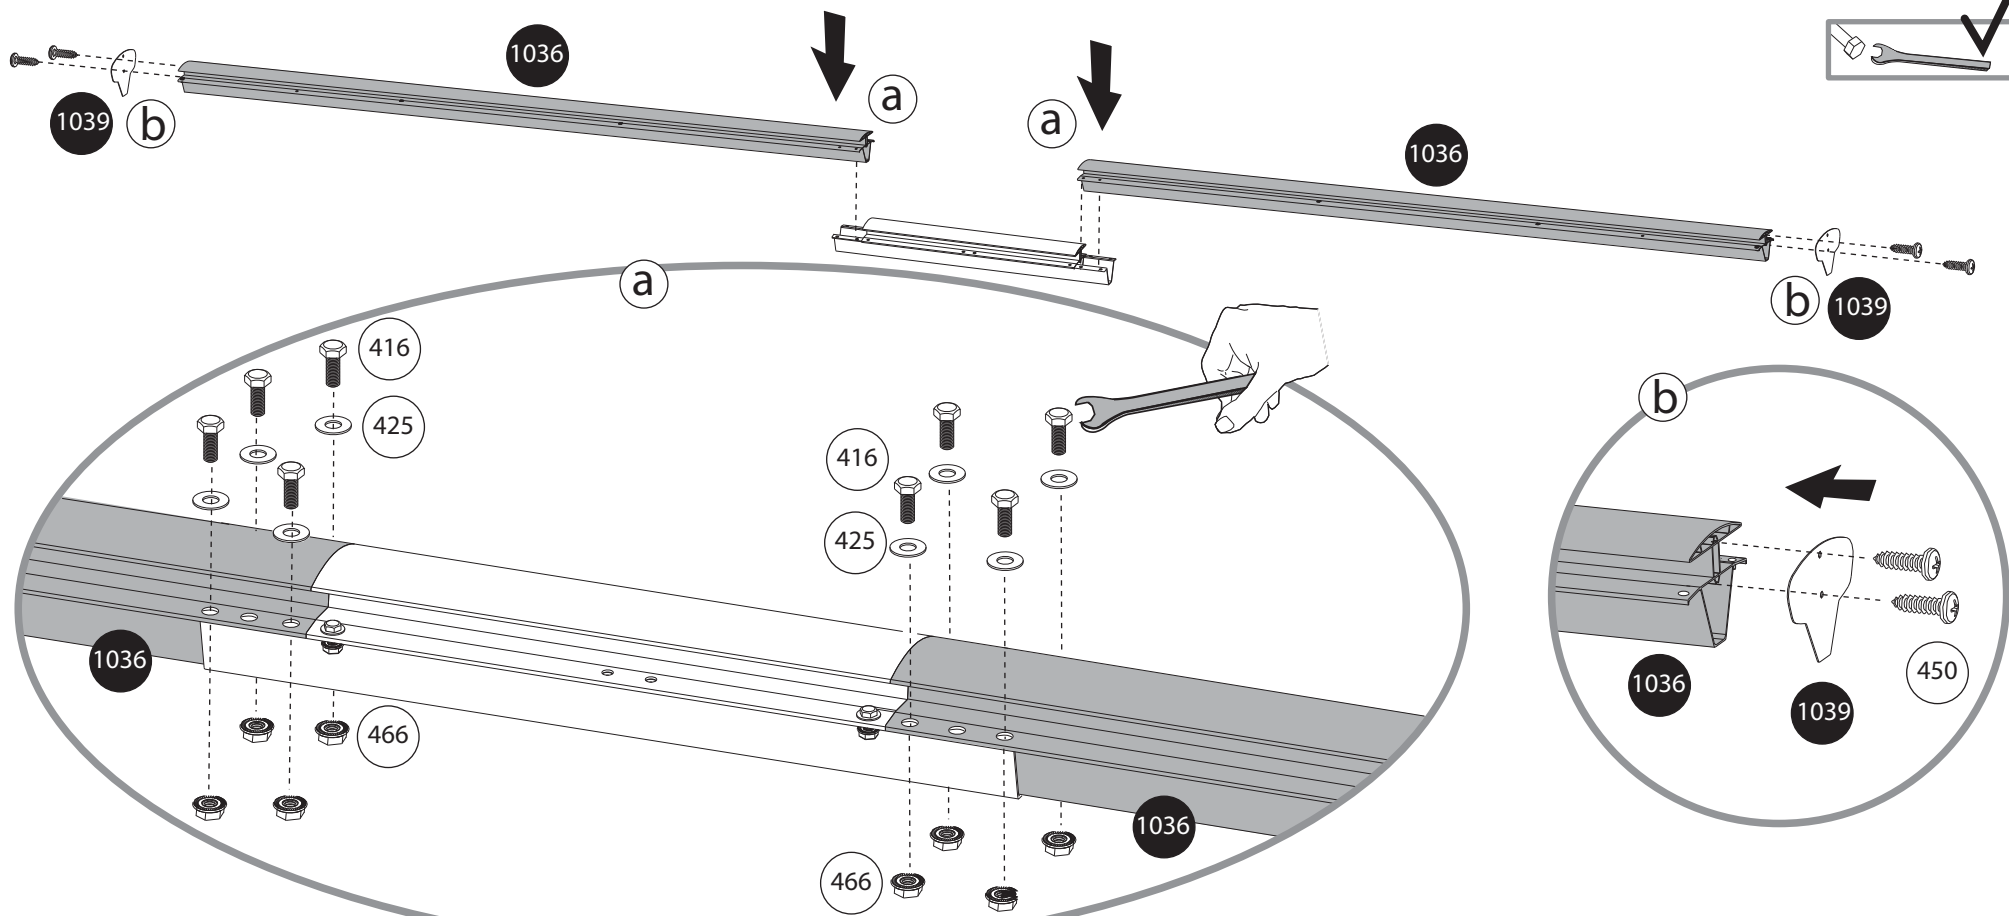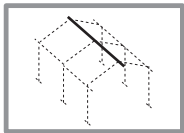


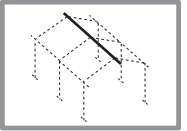


54








x2

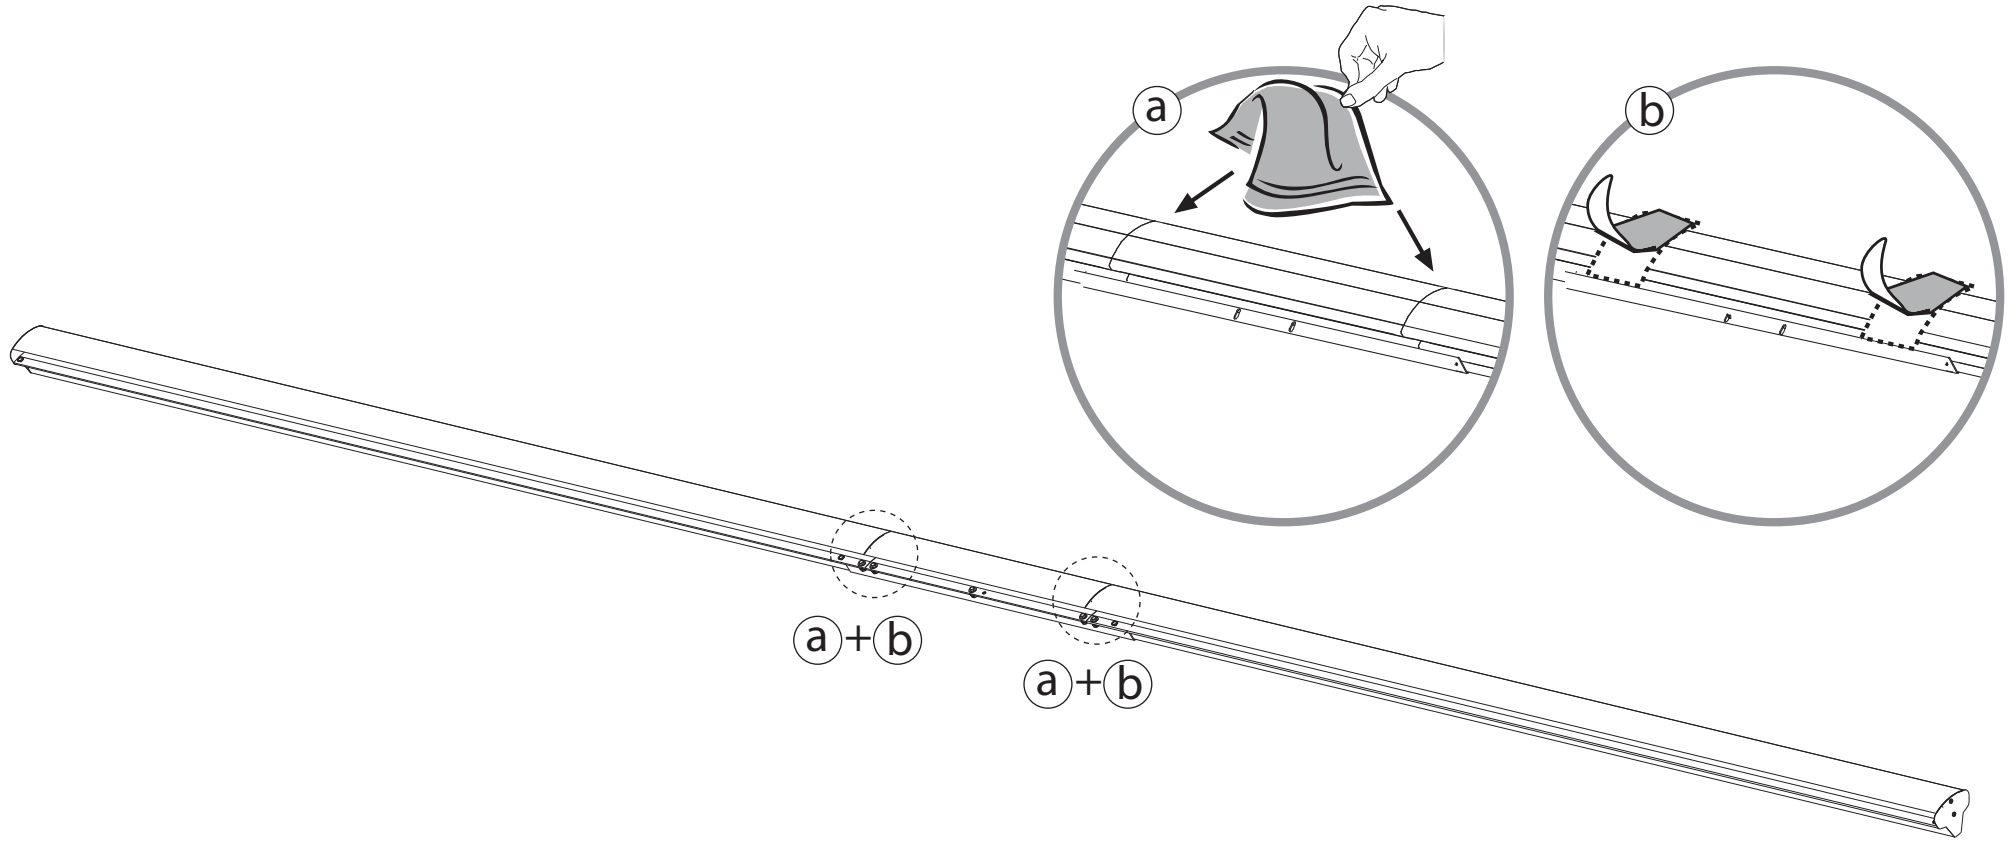

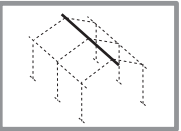

- 416 x6
- 466 x6
- 425 x6
- 426 x4

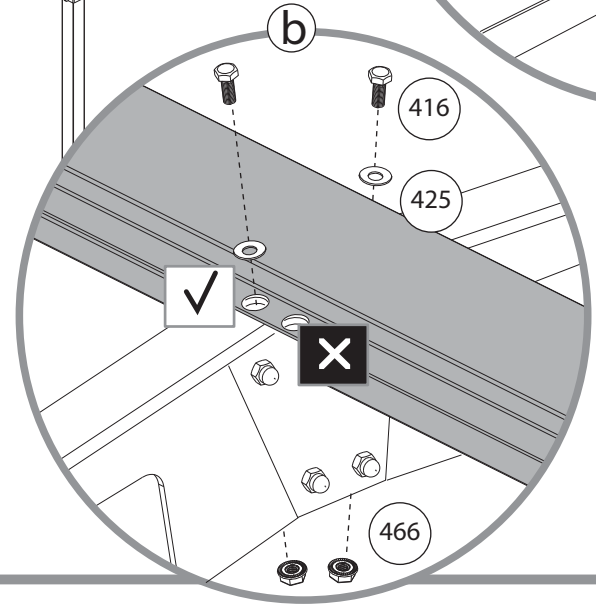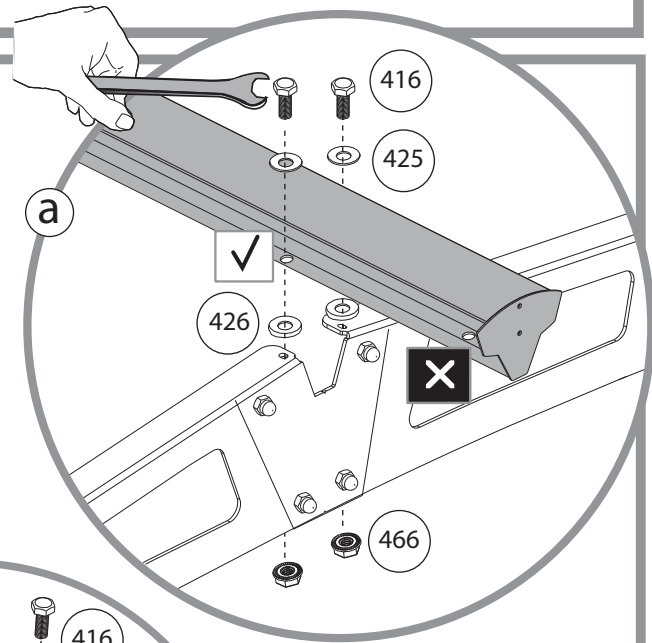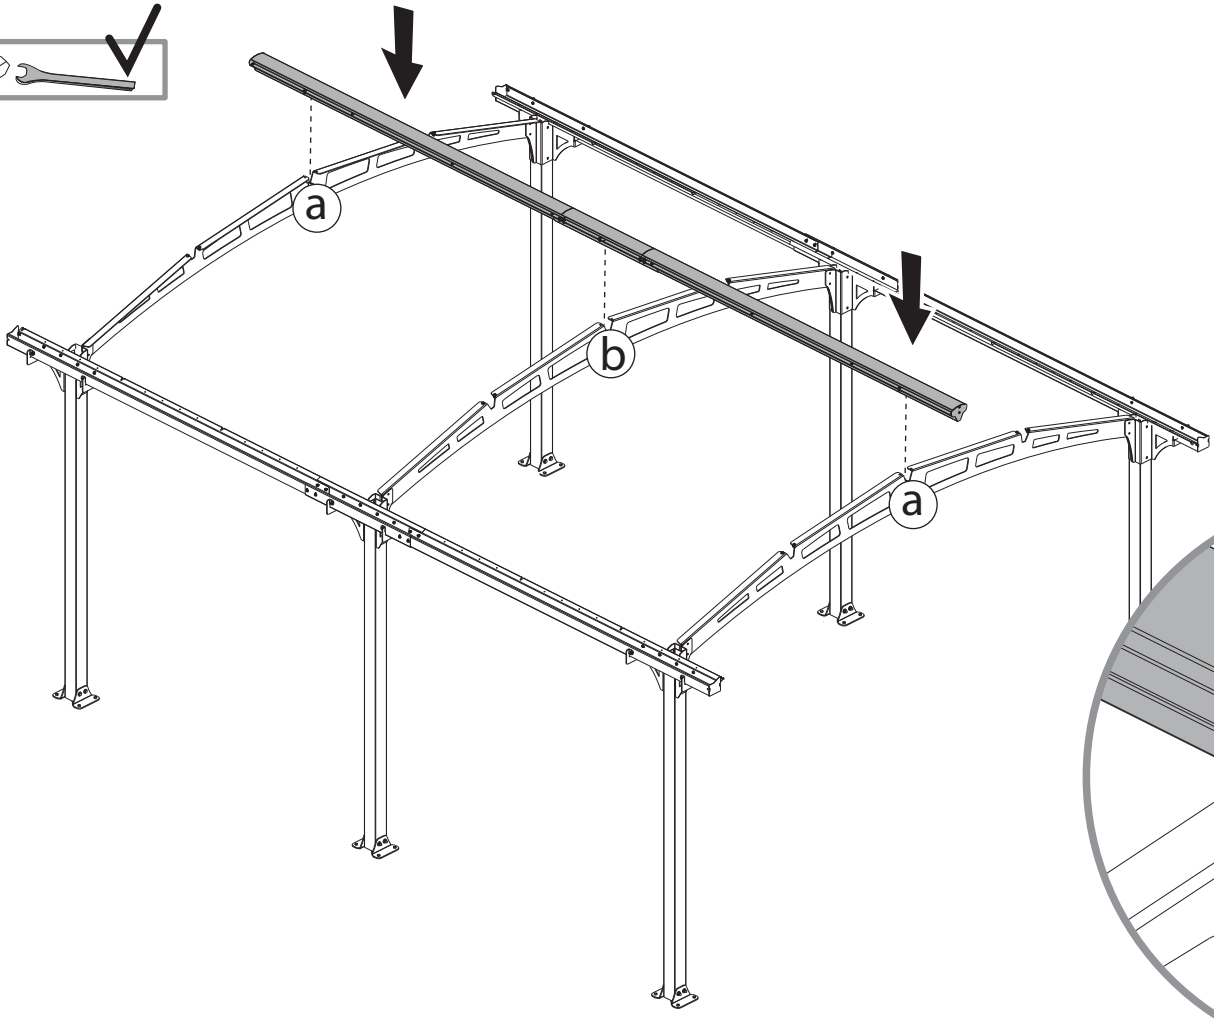

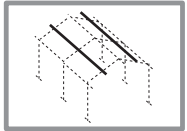



1034 x2

935 x2


416 x8

425 x8

466 x8

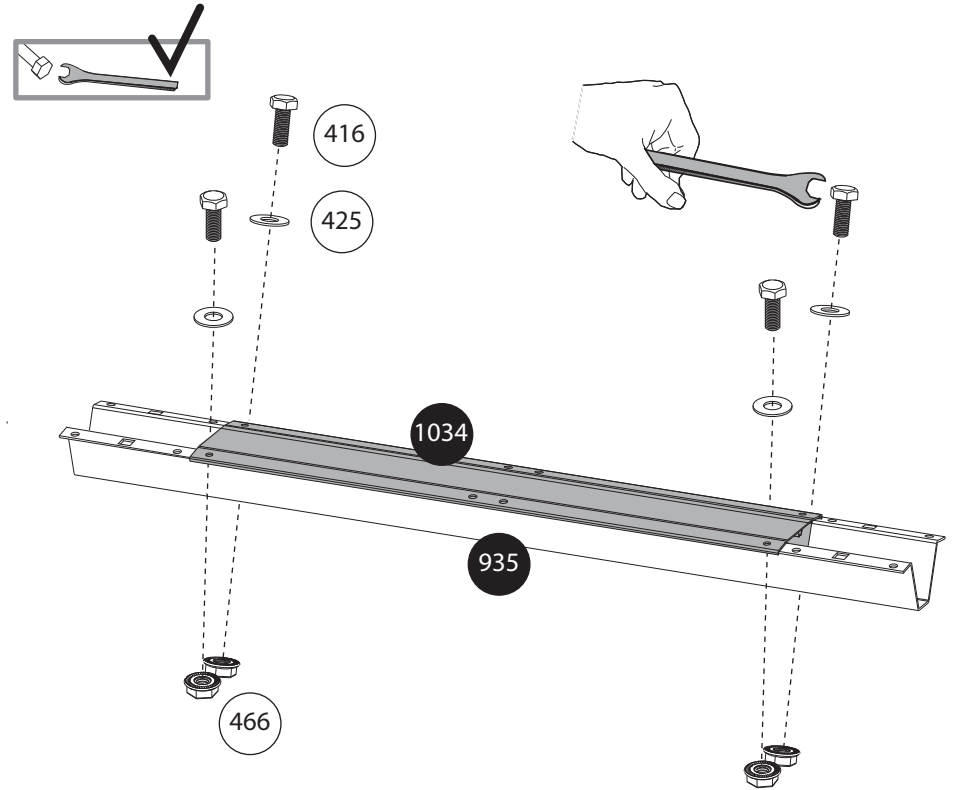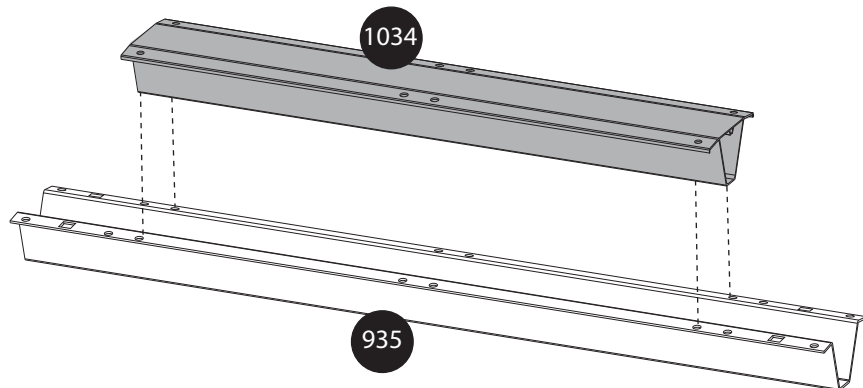

x2

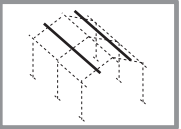

1033 x4


1040 x4

450 x4

416 x16


425 x16

466 x16

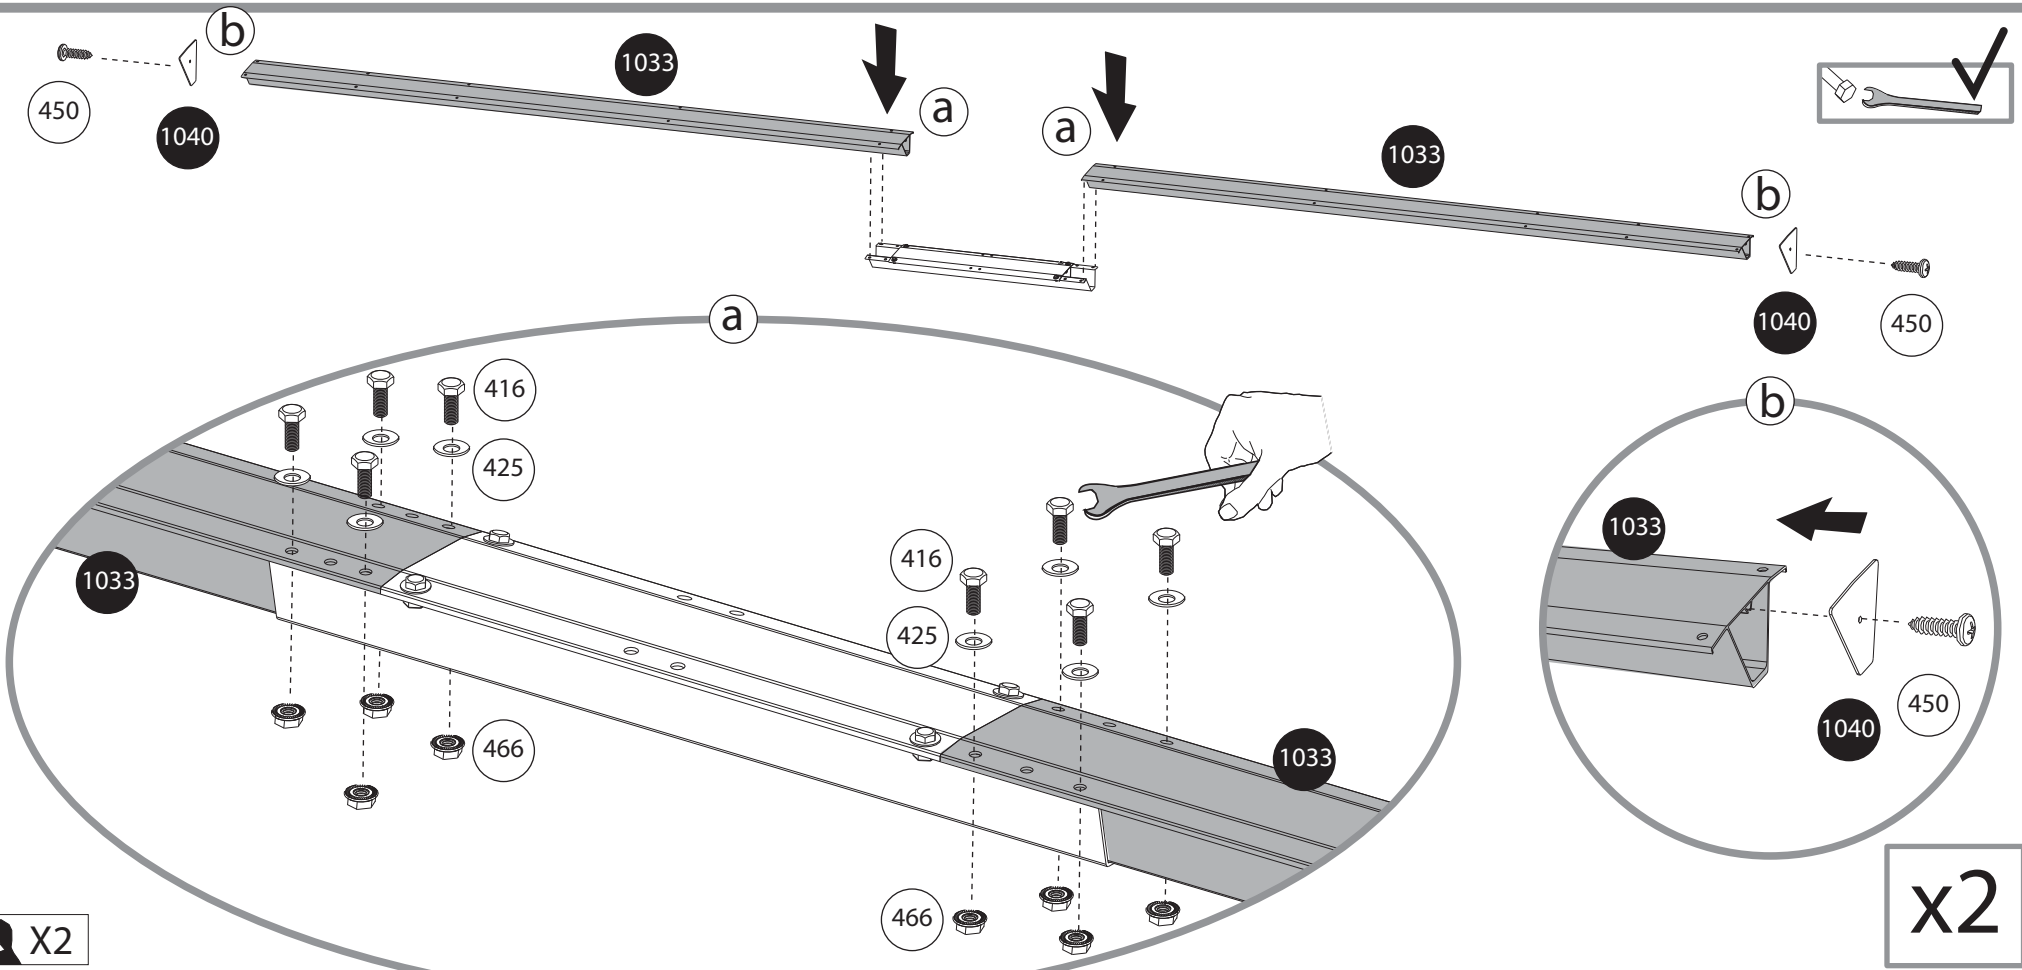



X2

x2

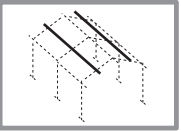





- 416 x8
- 410 x4
- 466 x12
- 425 x12
- 426 x8





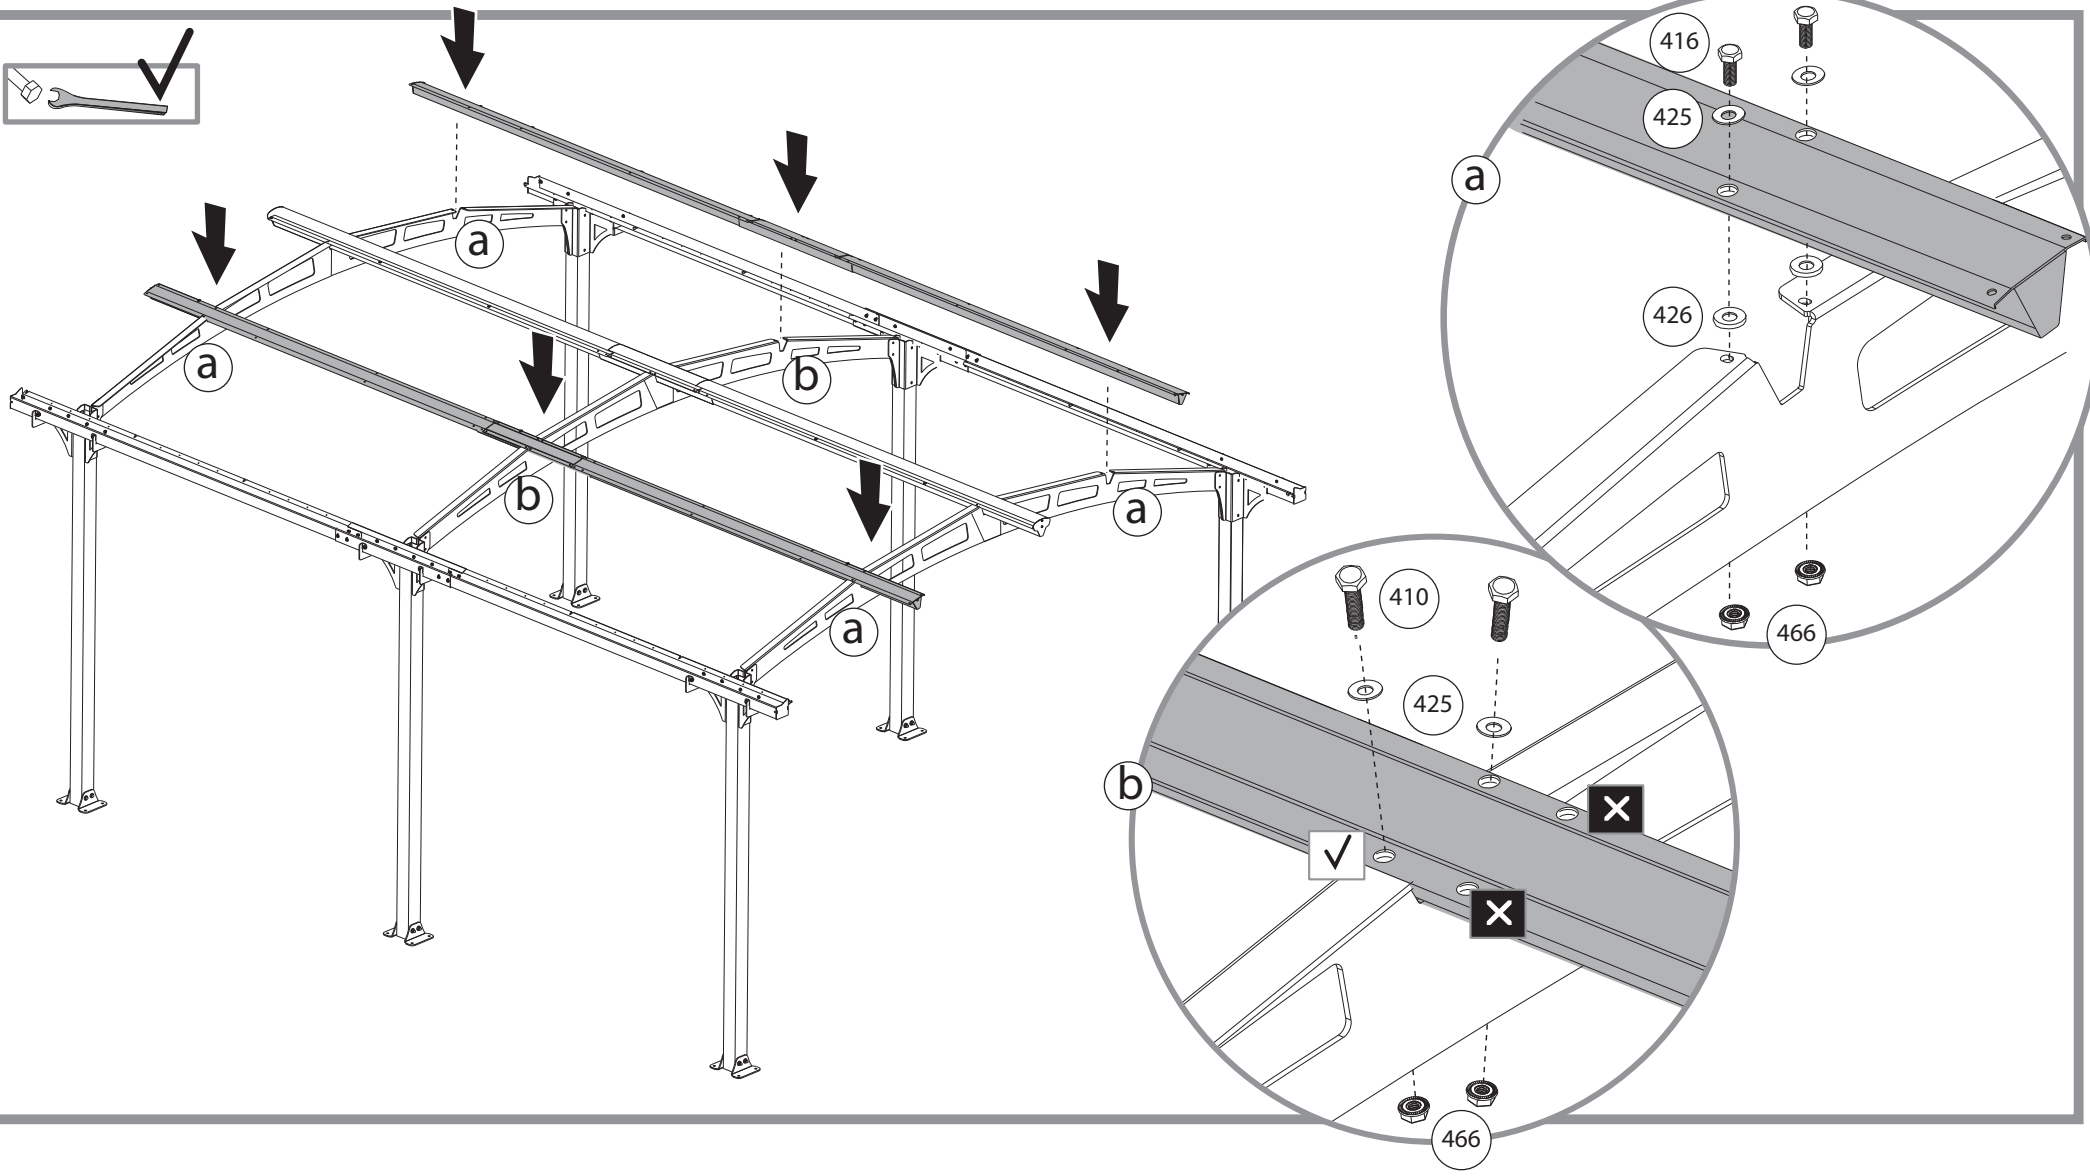


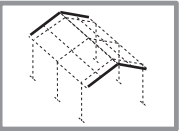


411 x16

466 x16

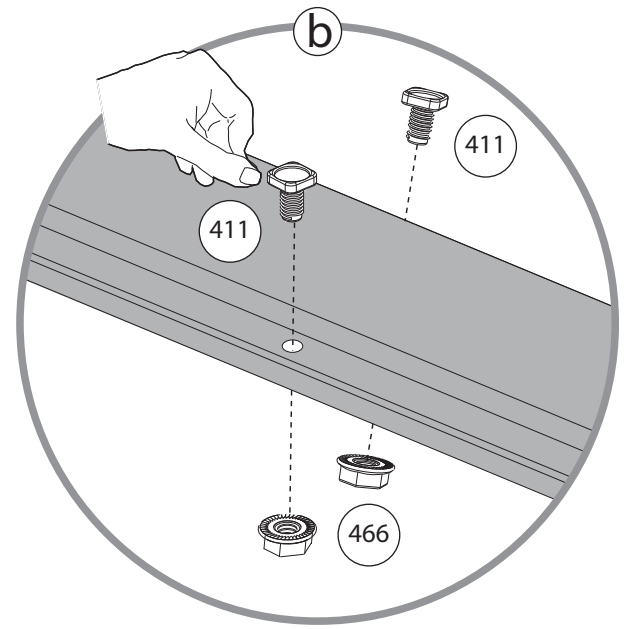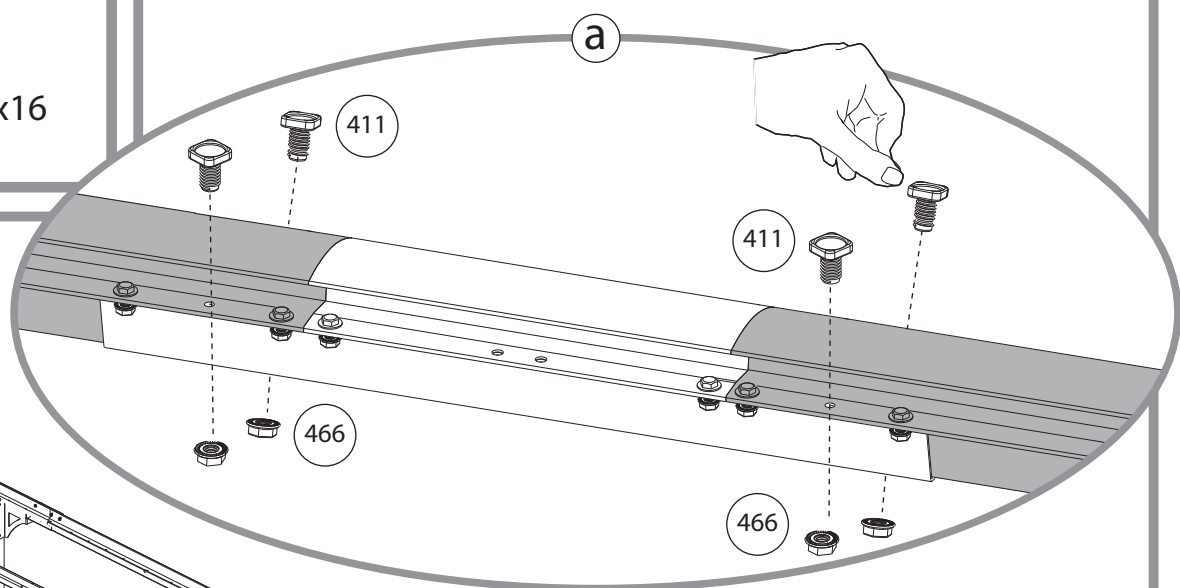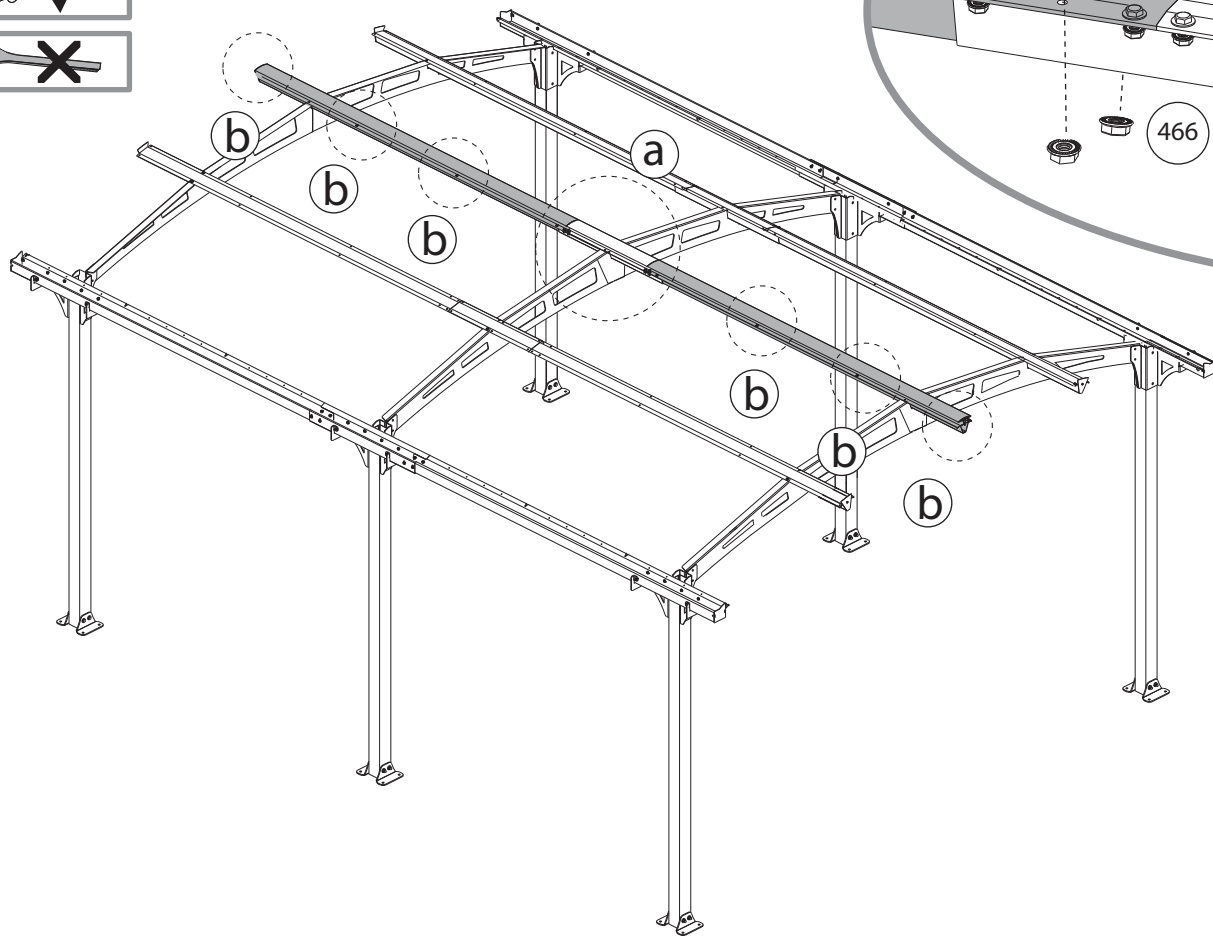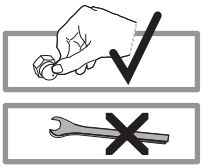

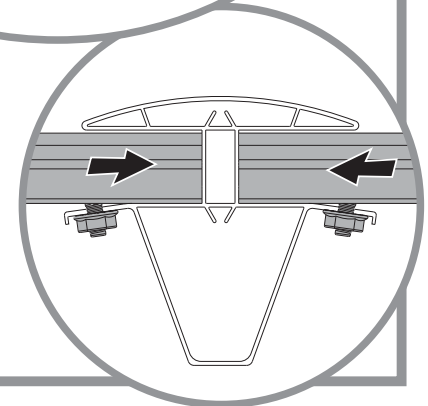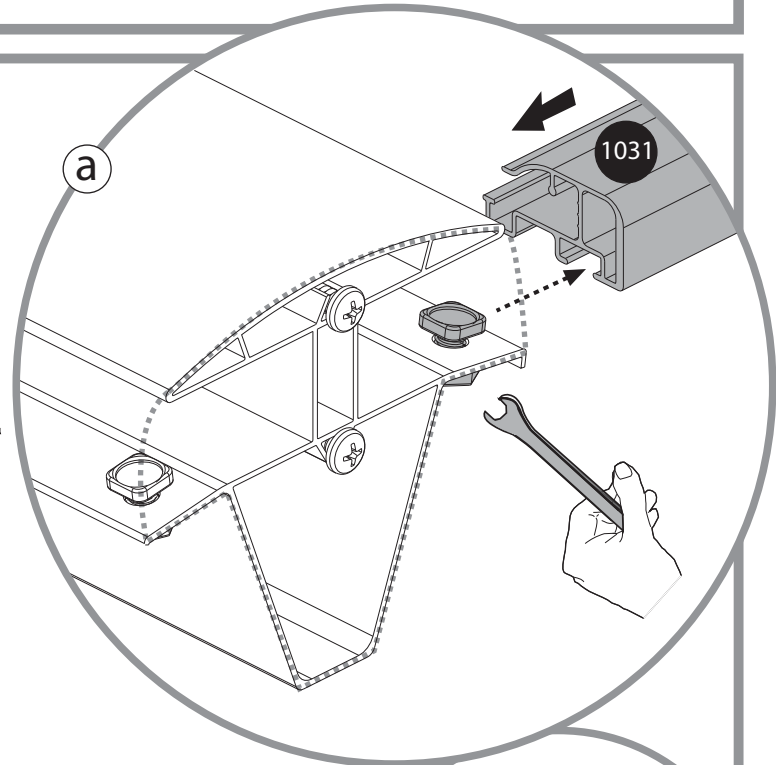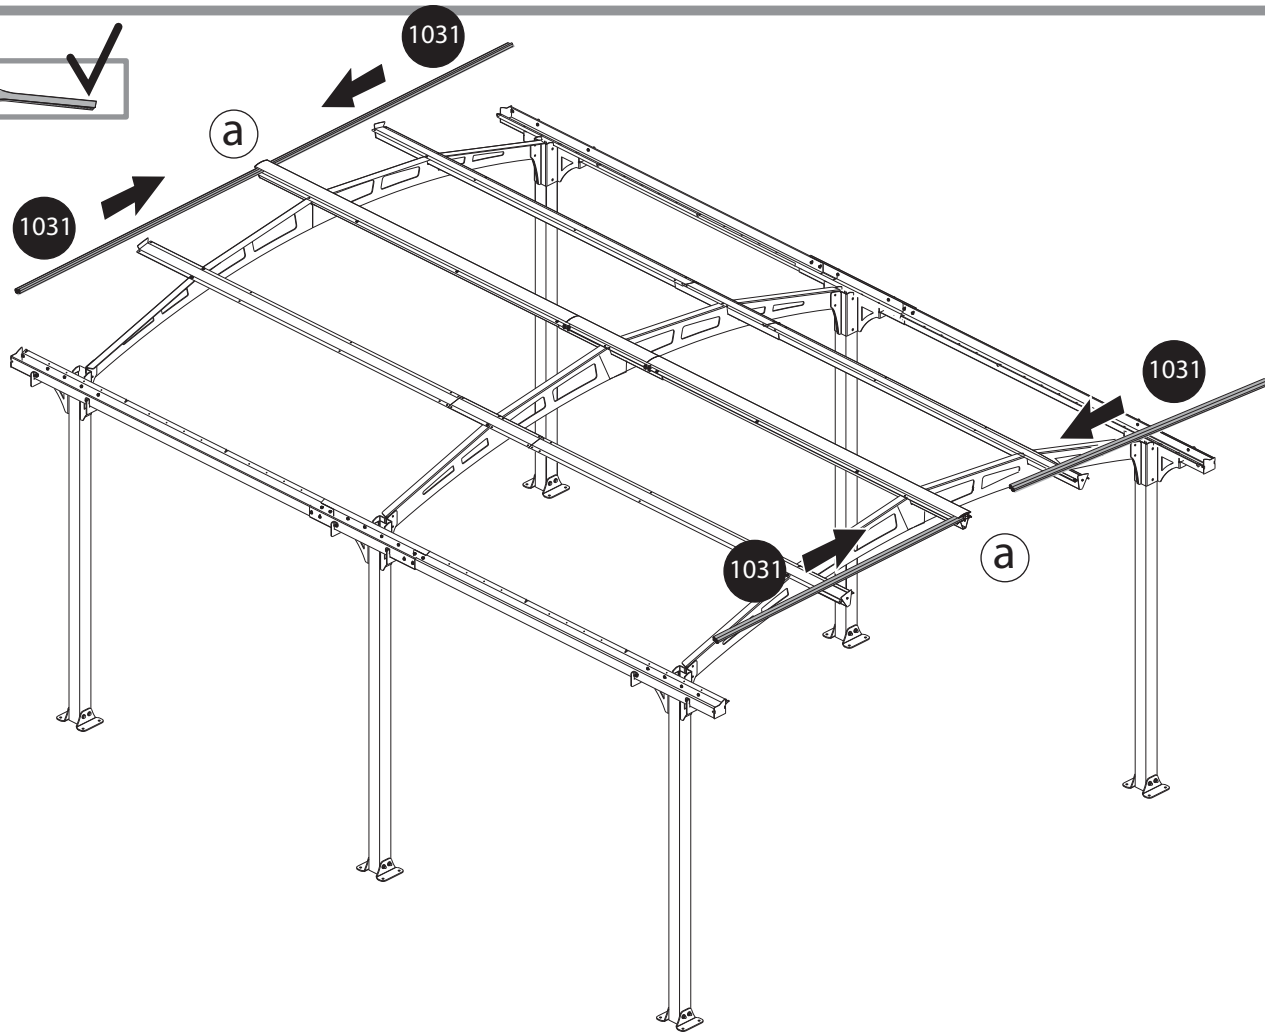

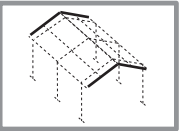




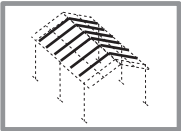


1032




x12

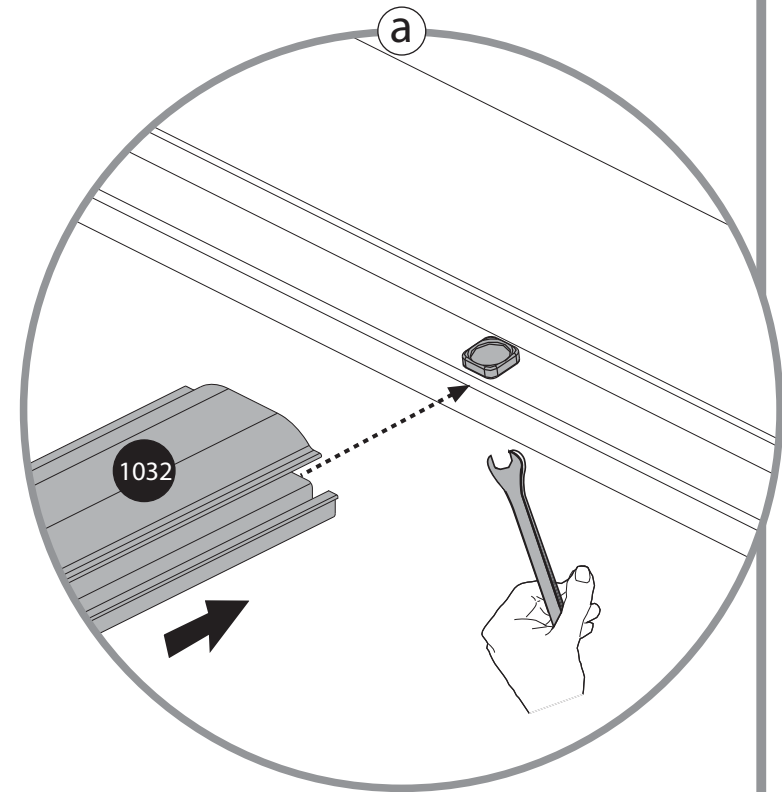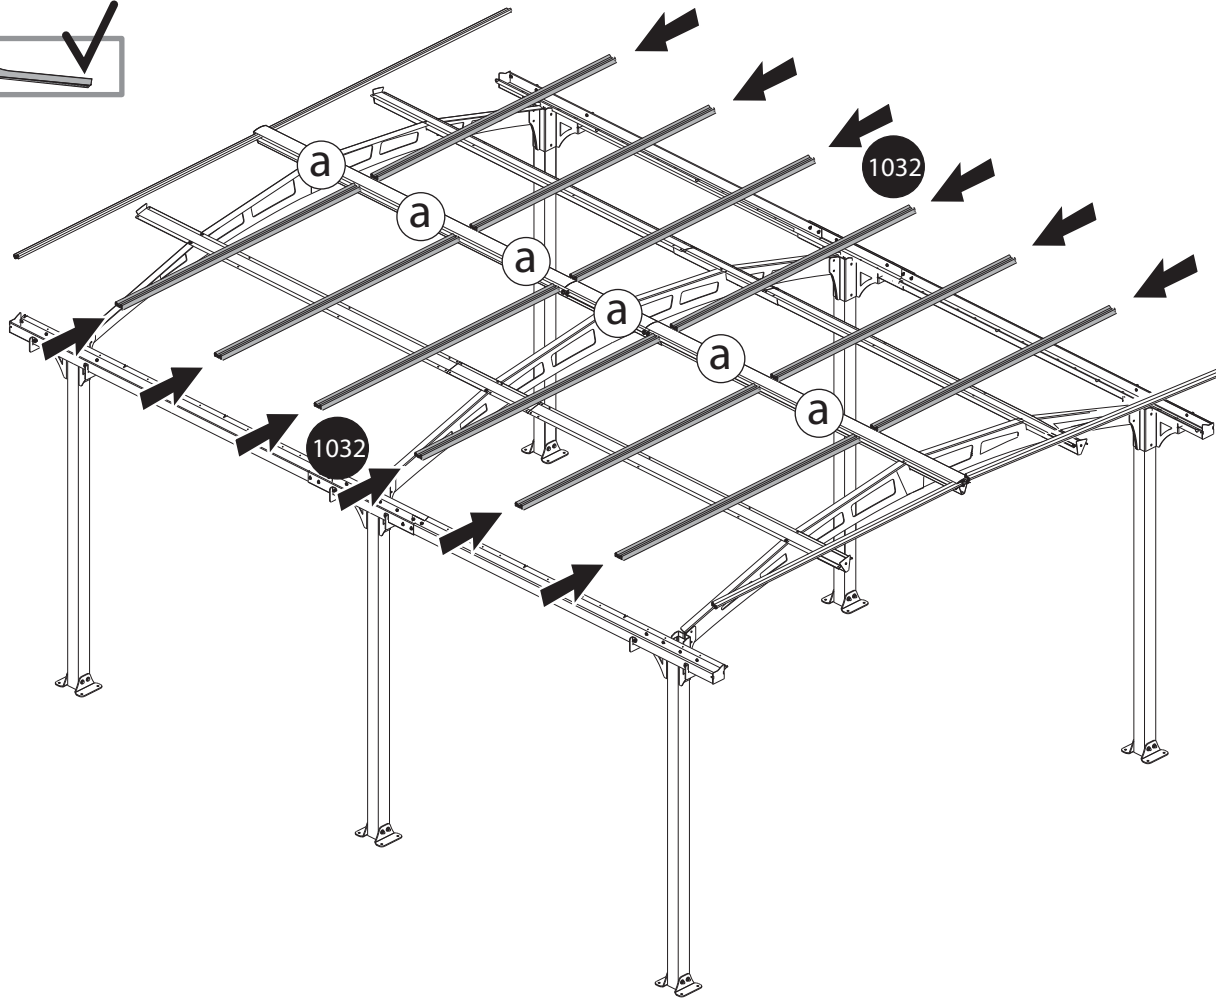

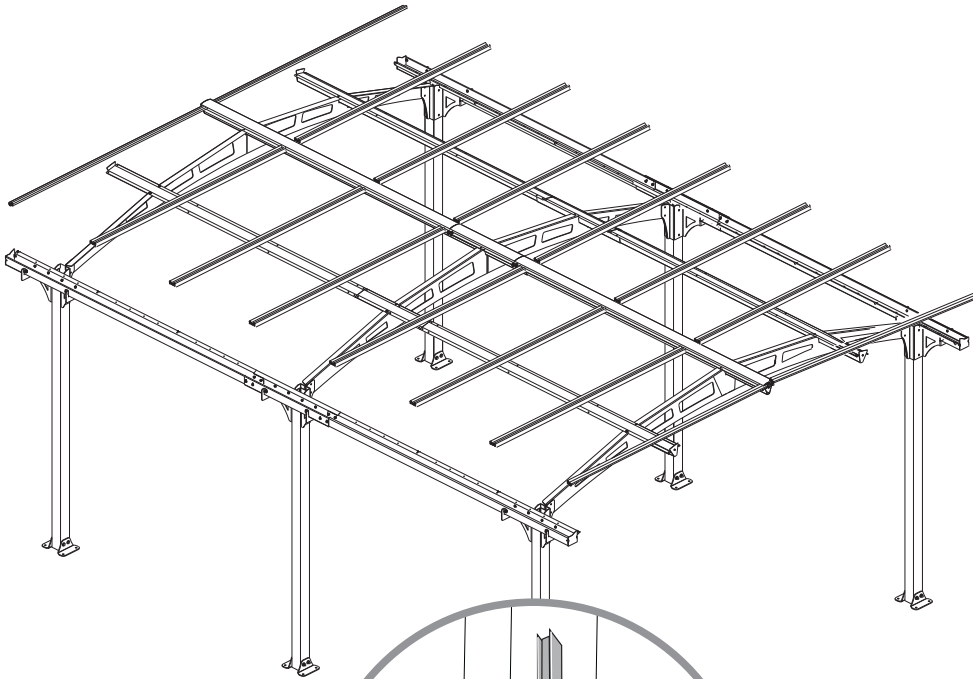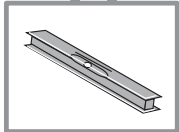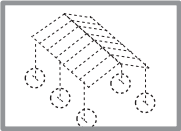







x6

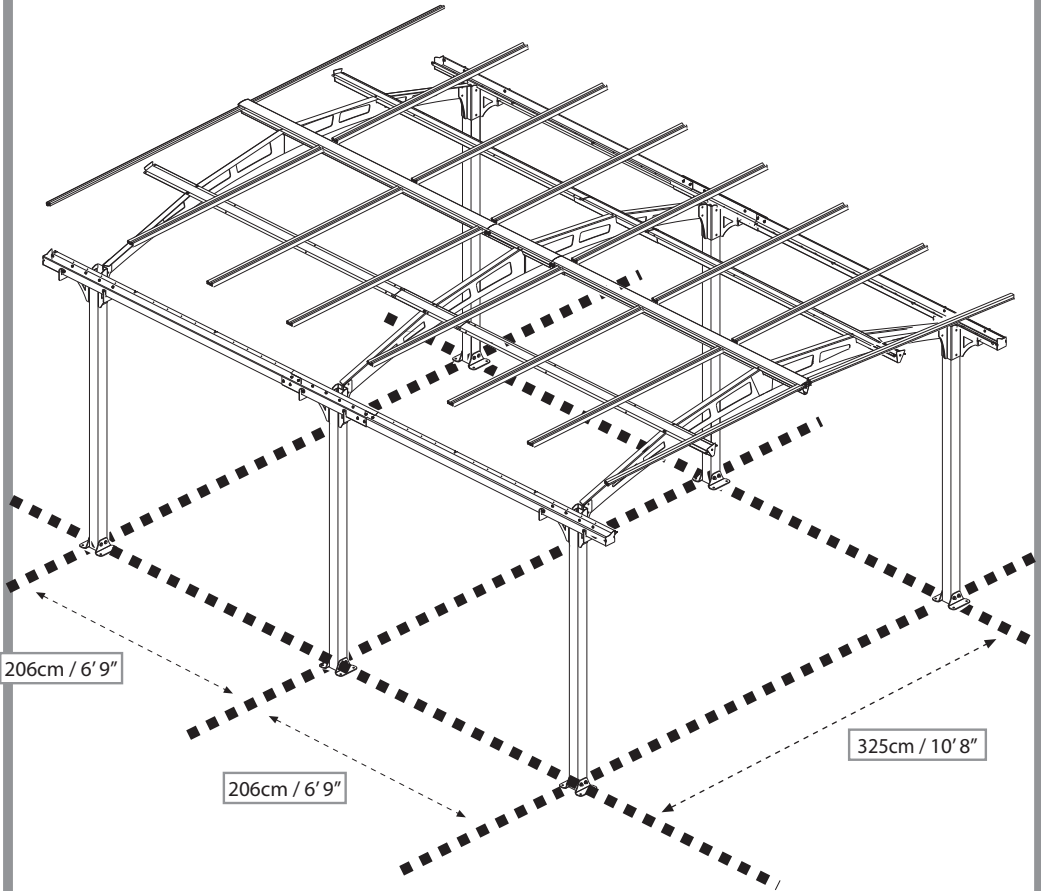


206cm / 6'9"


206cm / 6'9"

325cm / 10'8"

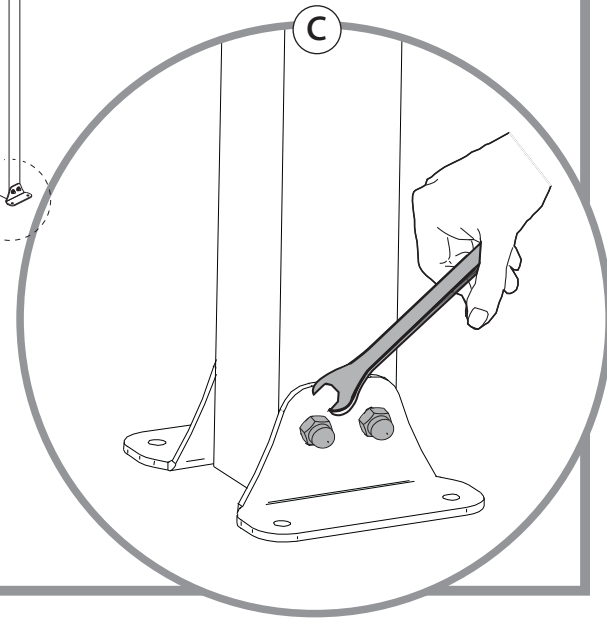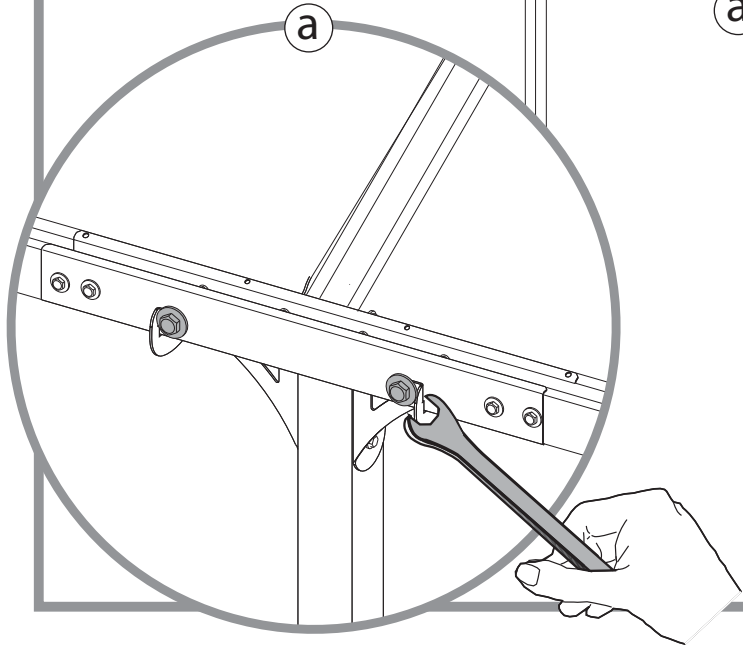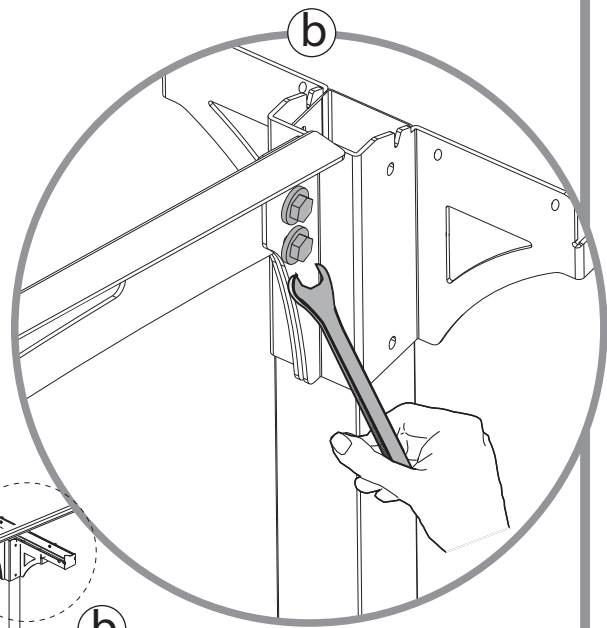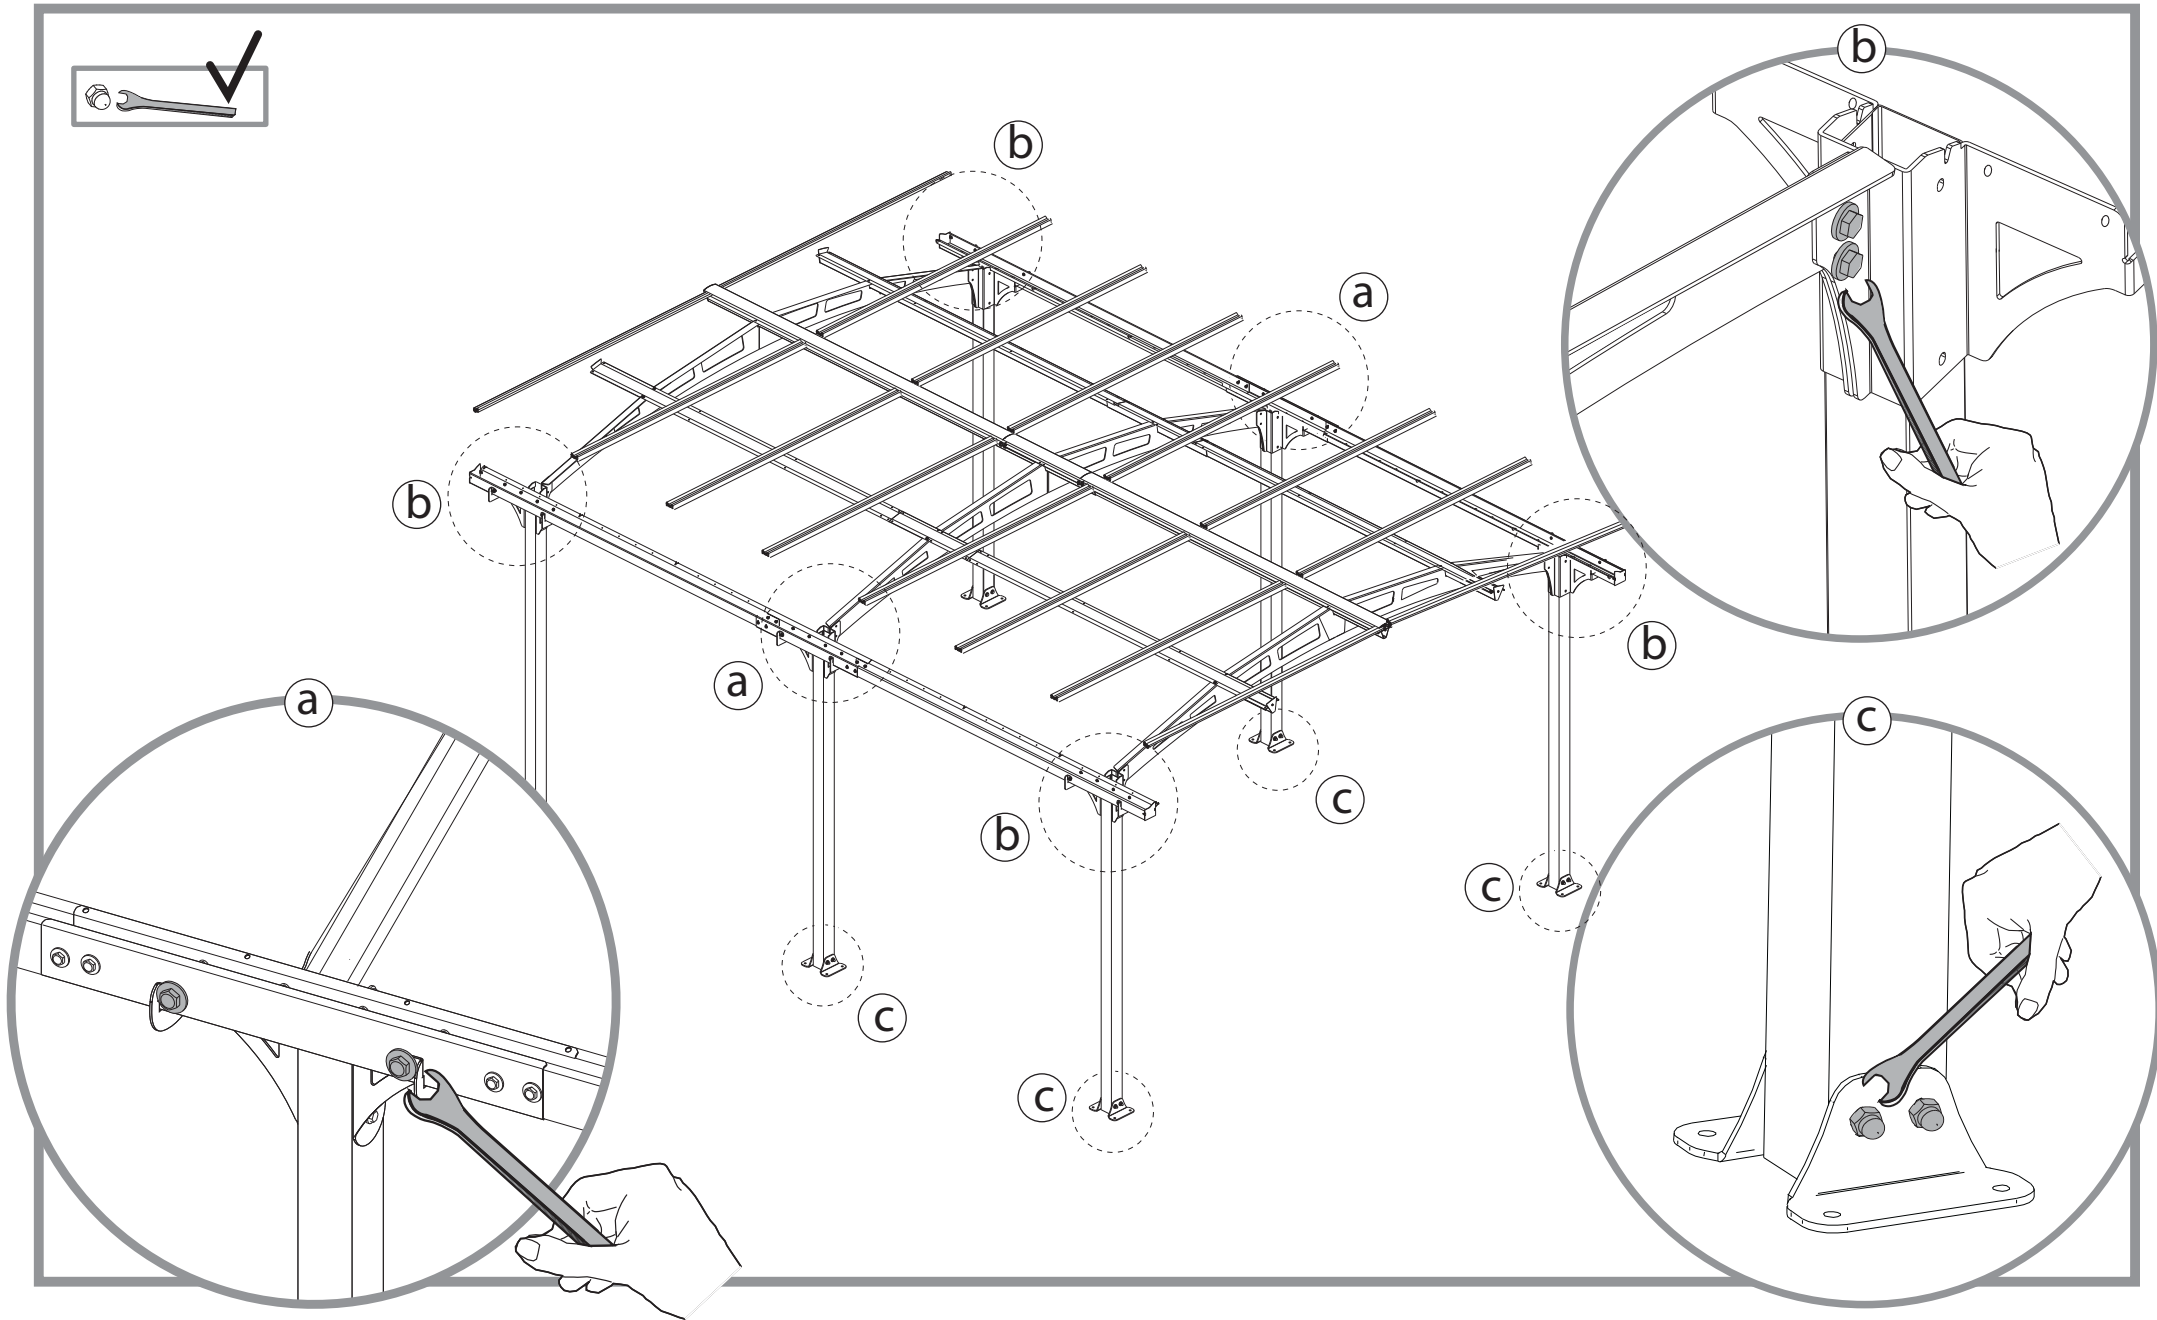
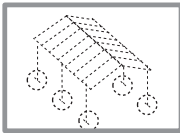


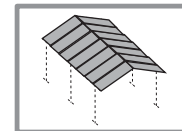






211





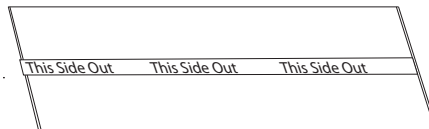






x14

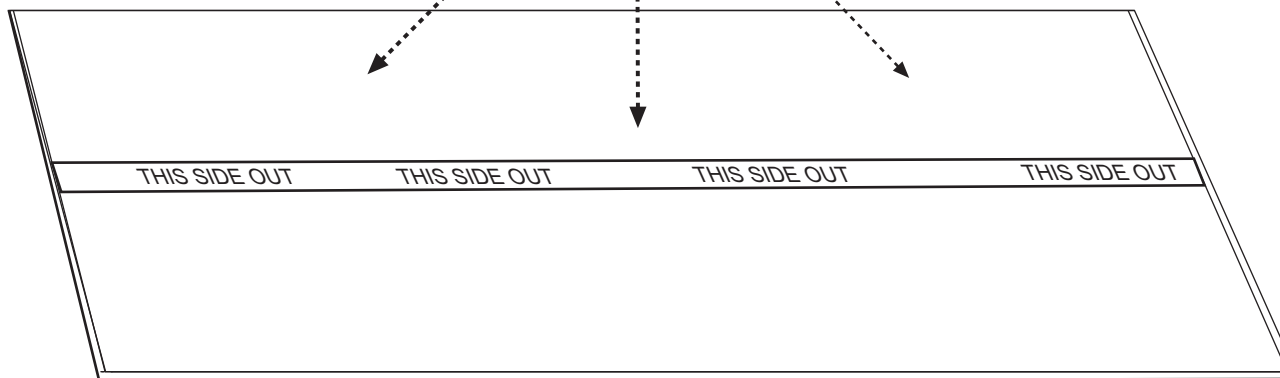
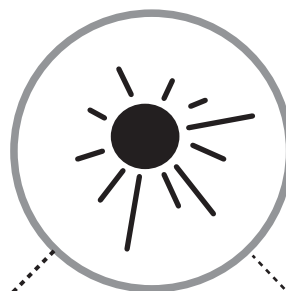


x14

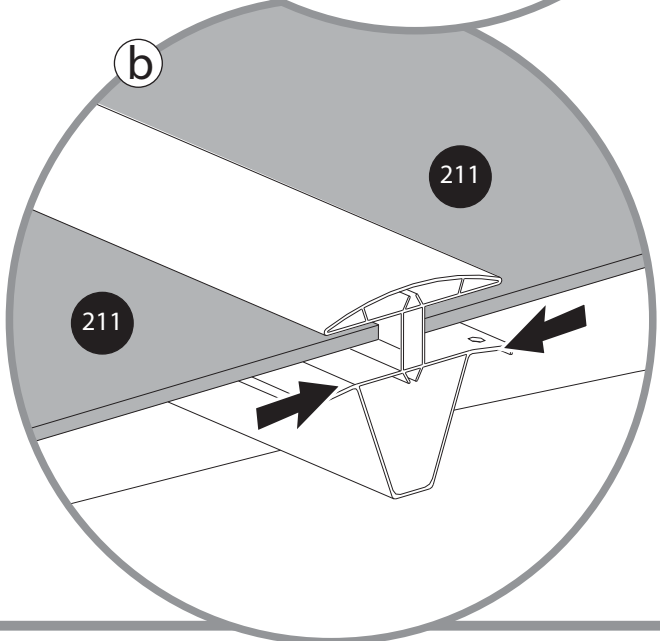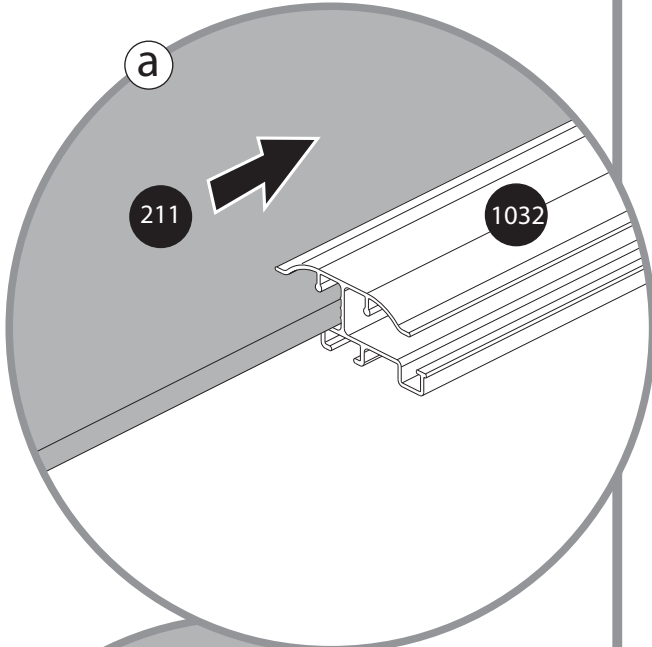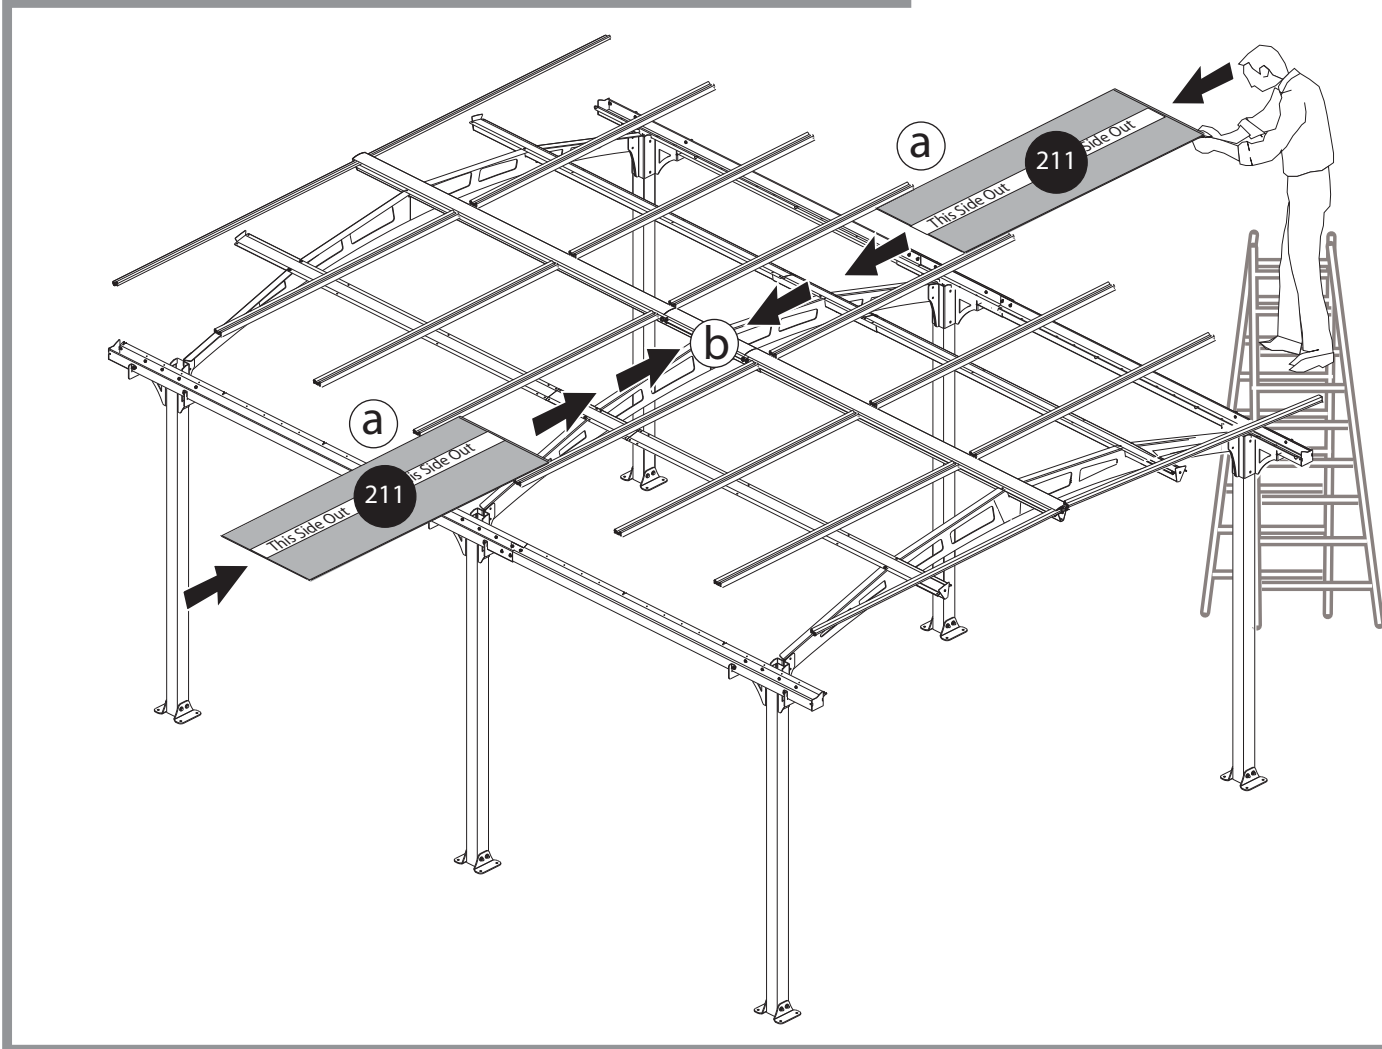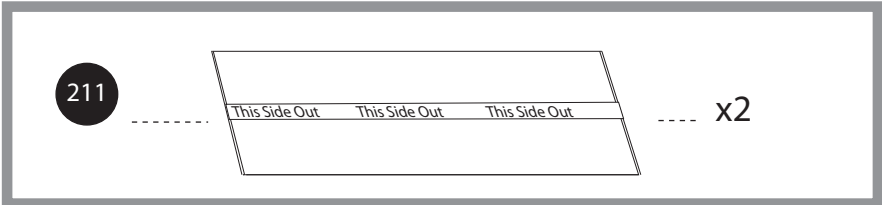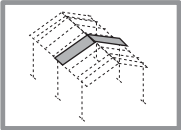

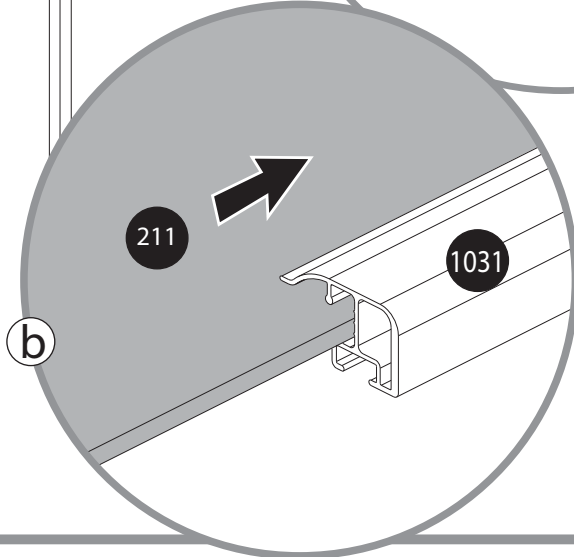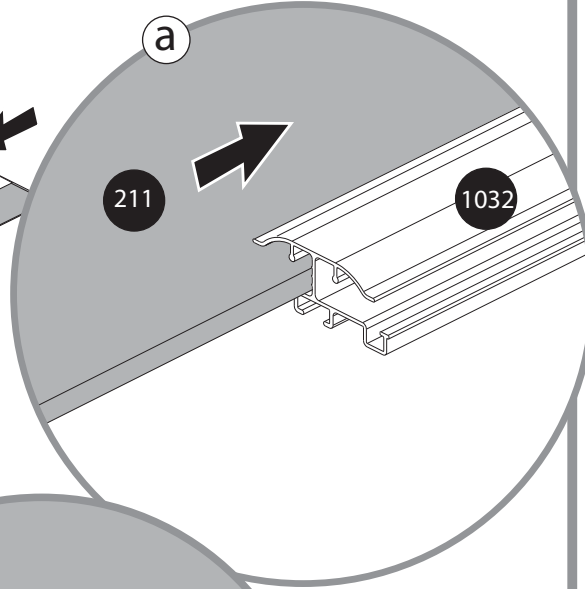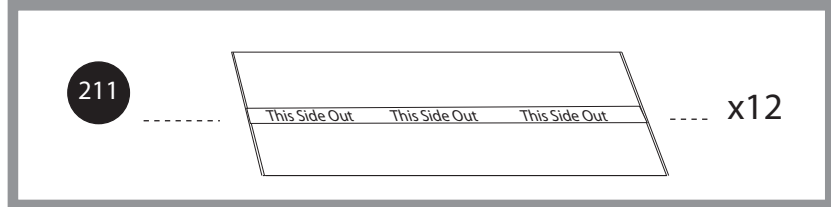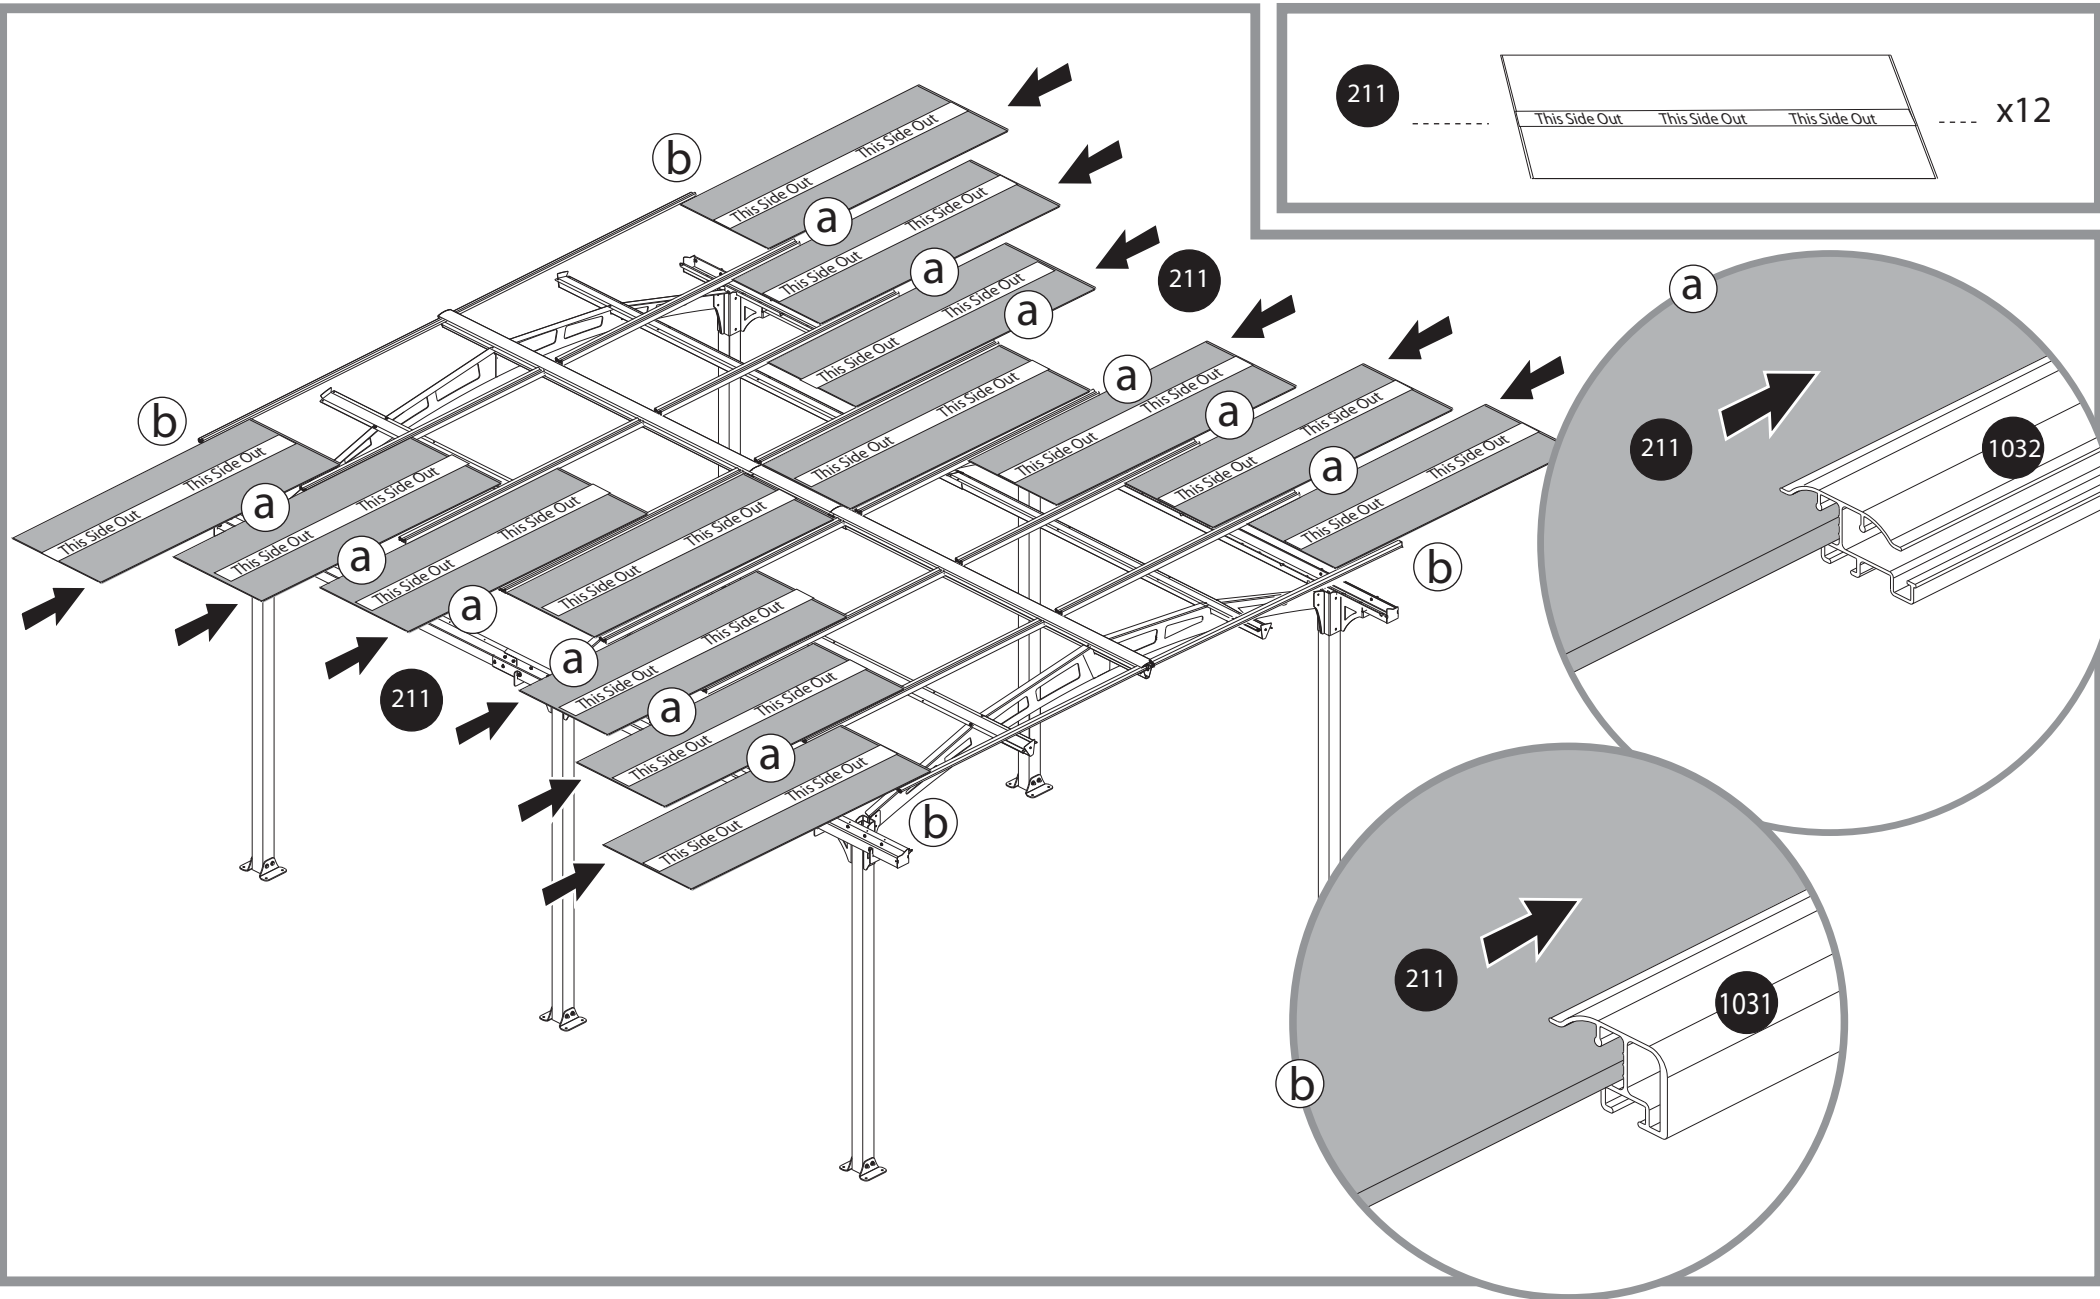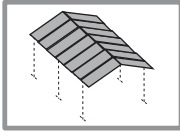

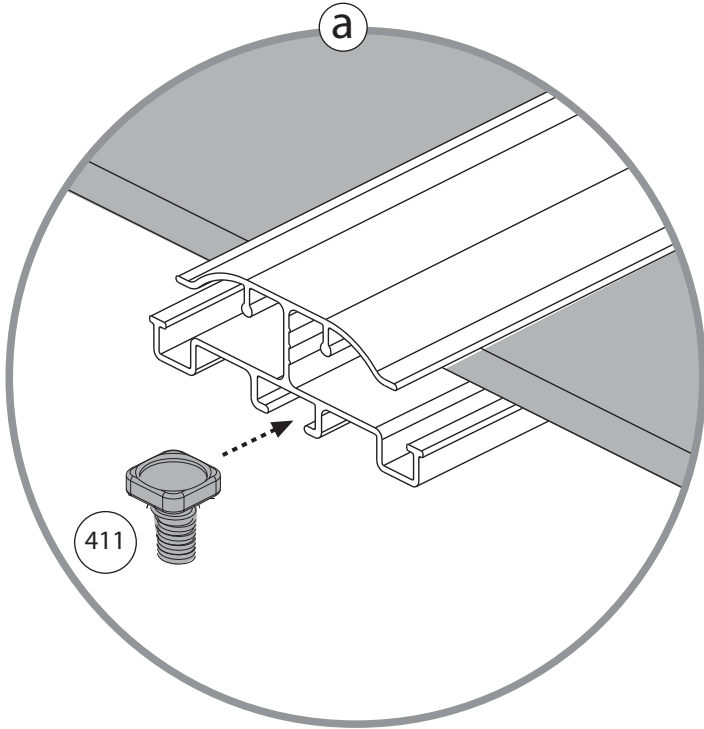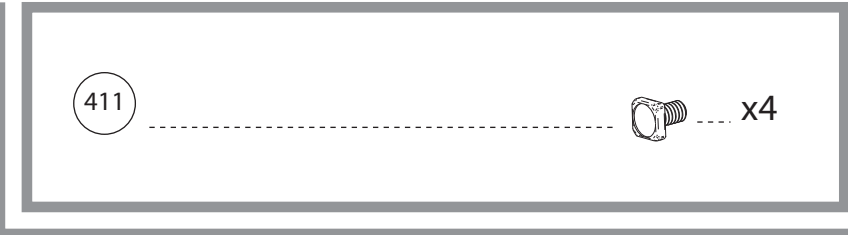
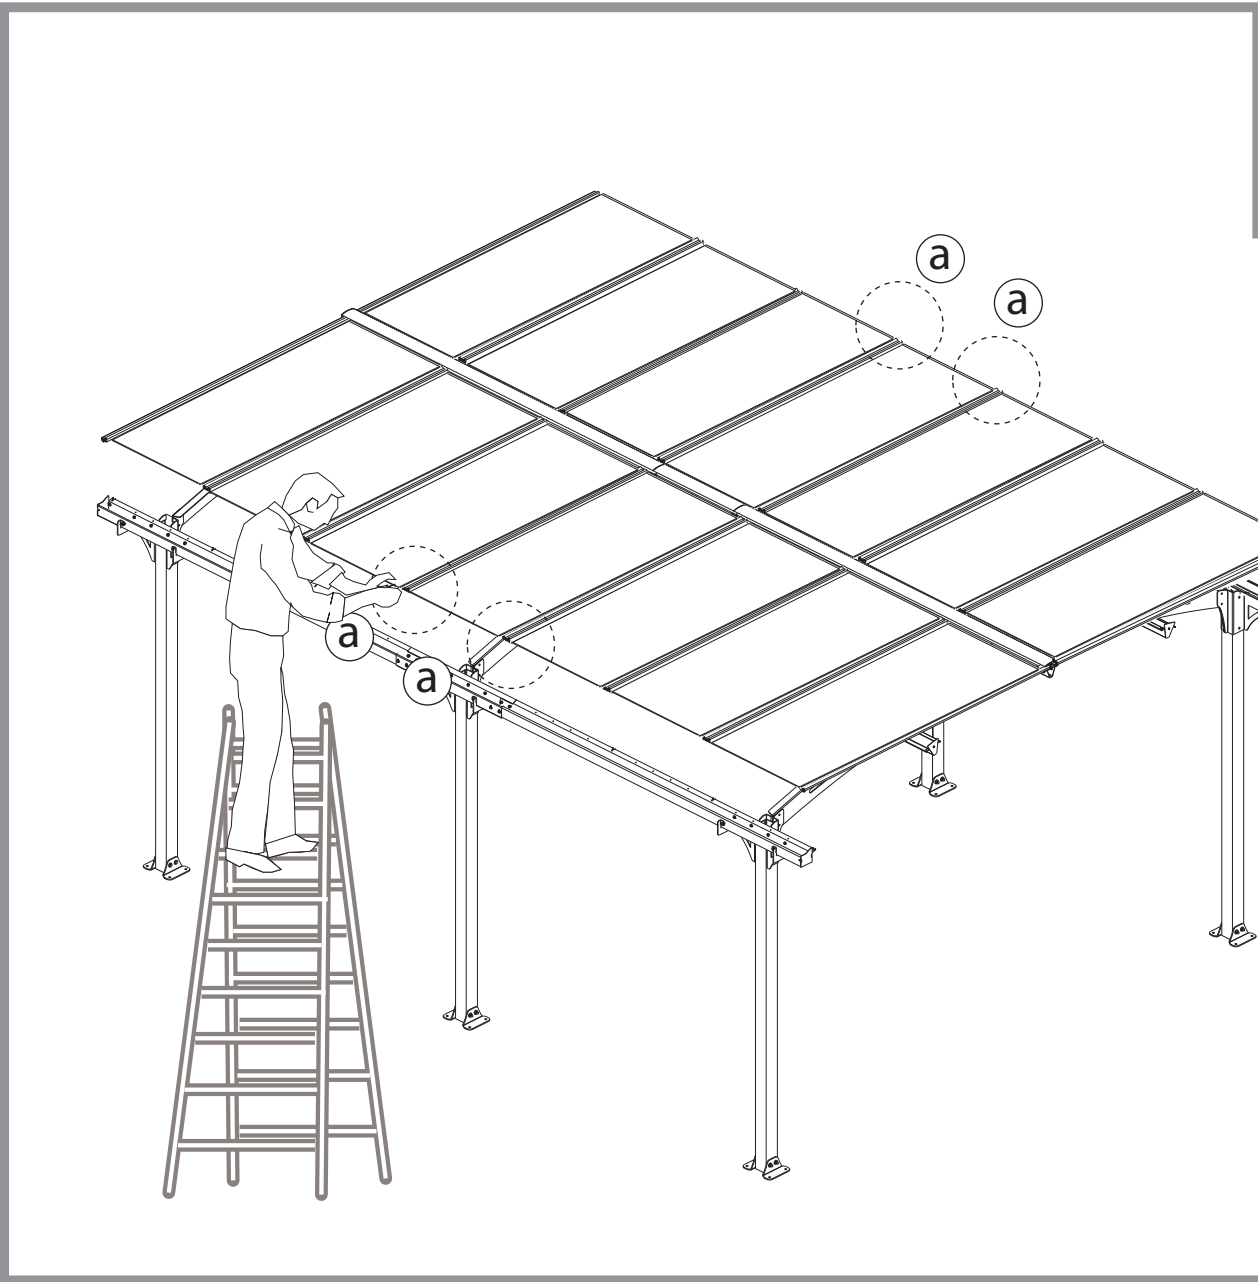
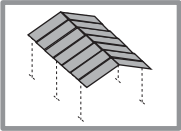



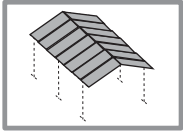


466



x4

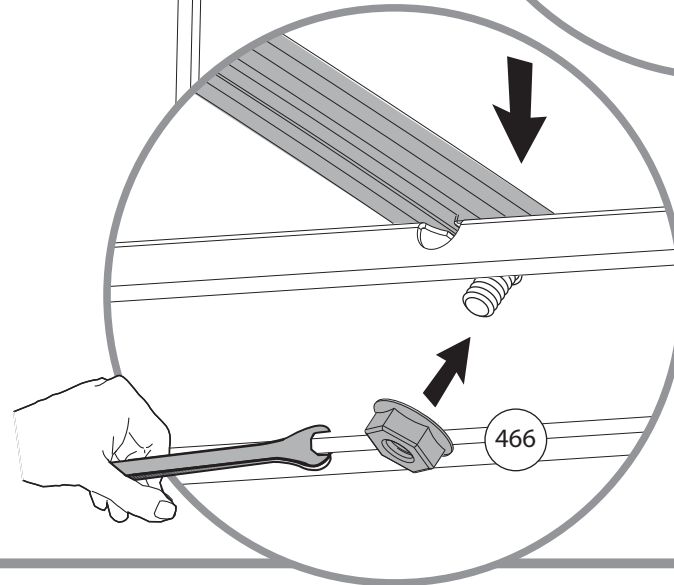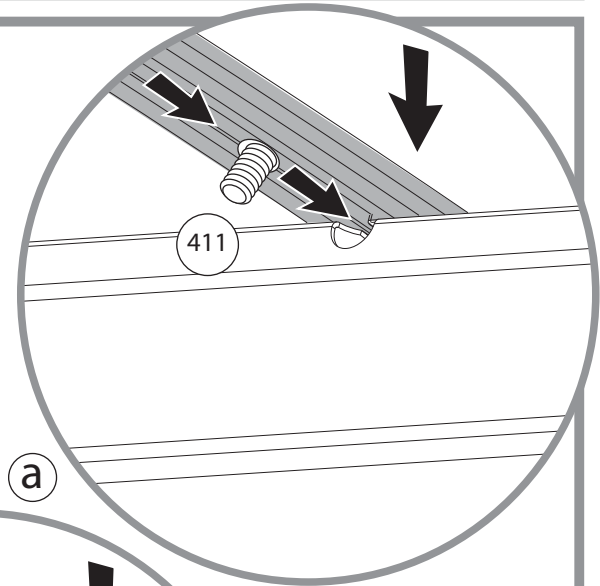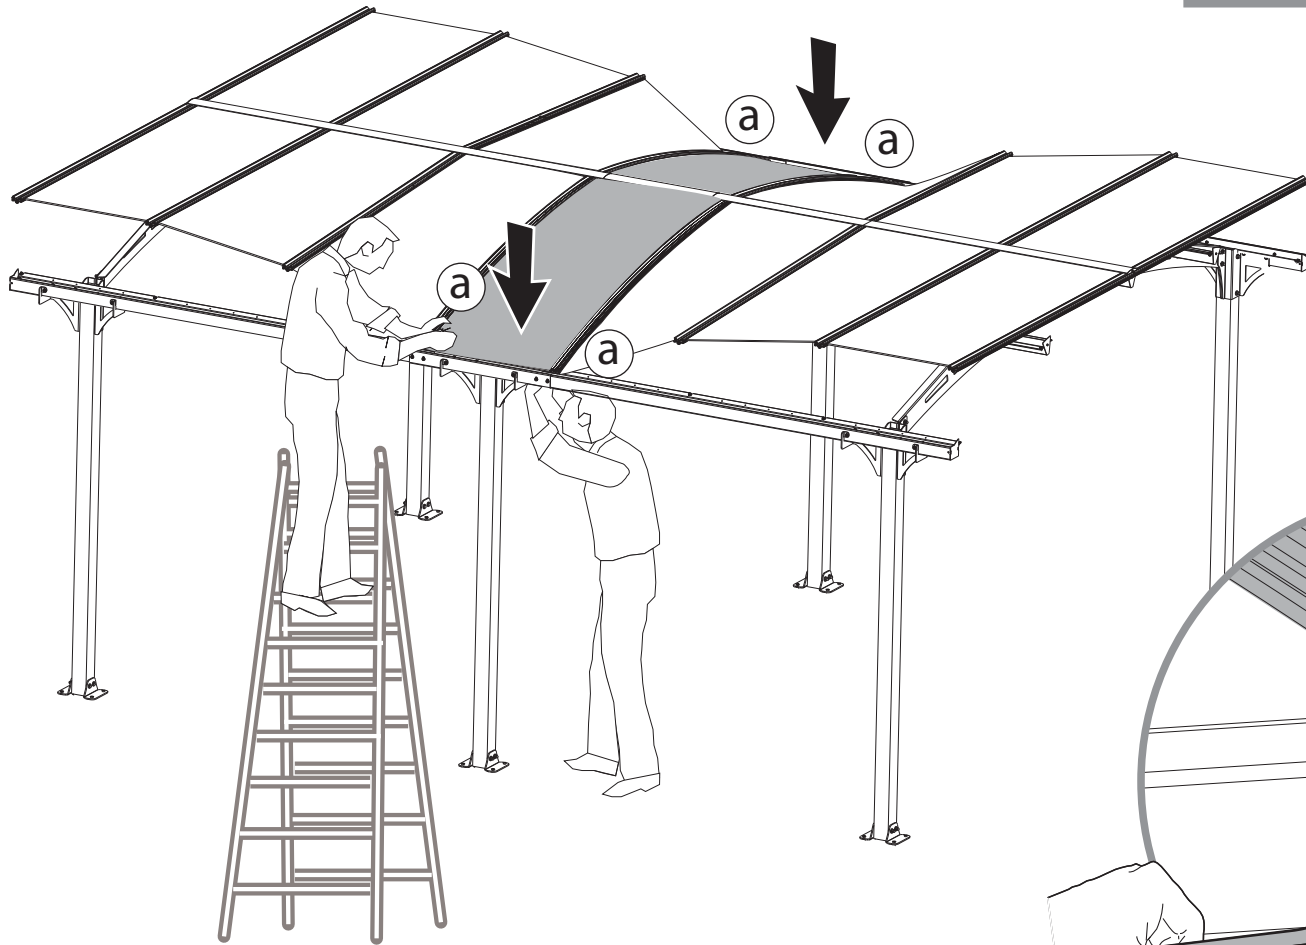

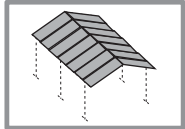

466








x8

411



x8

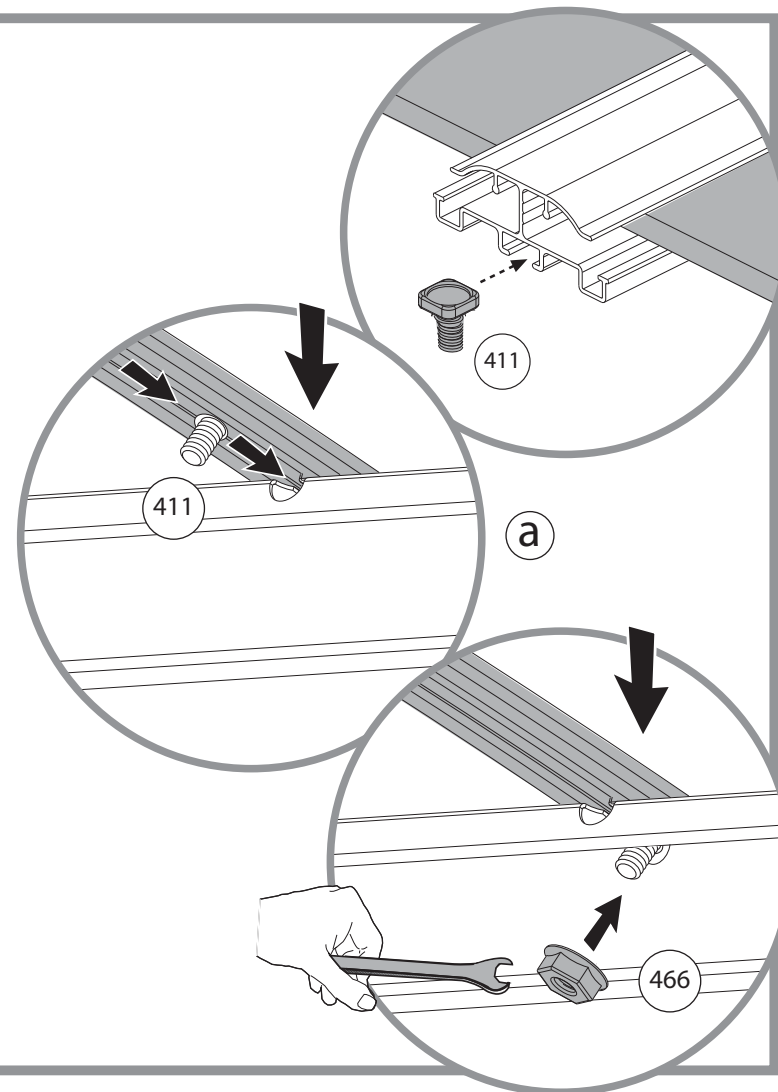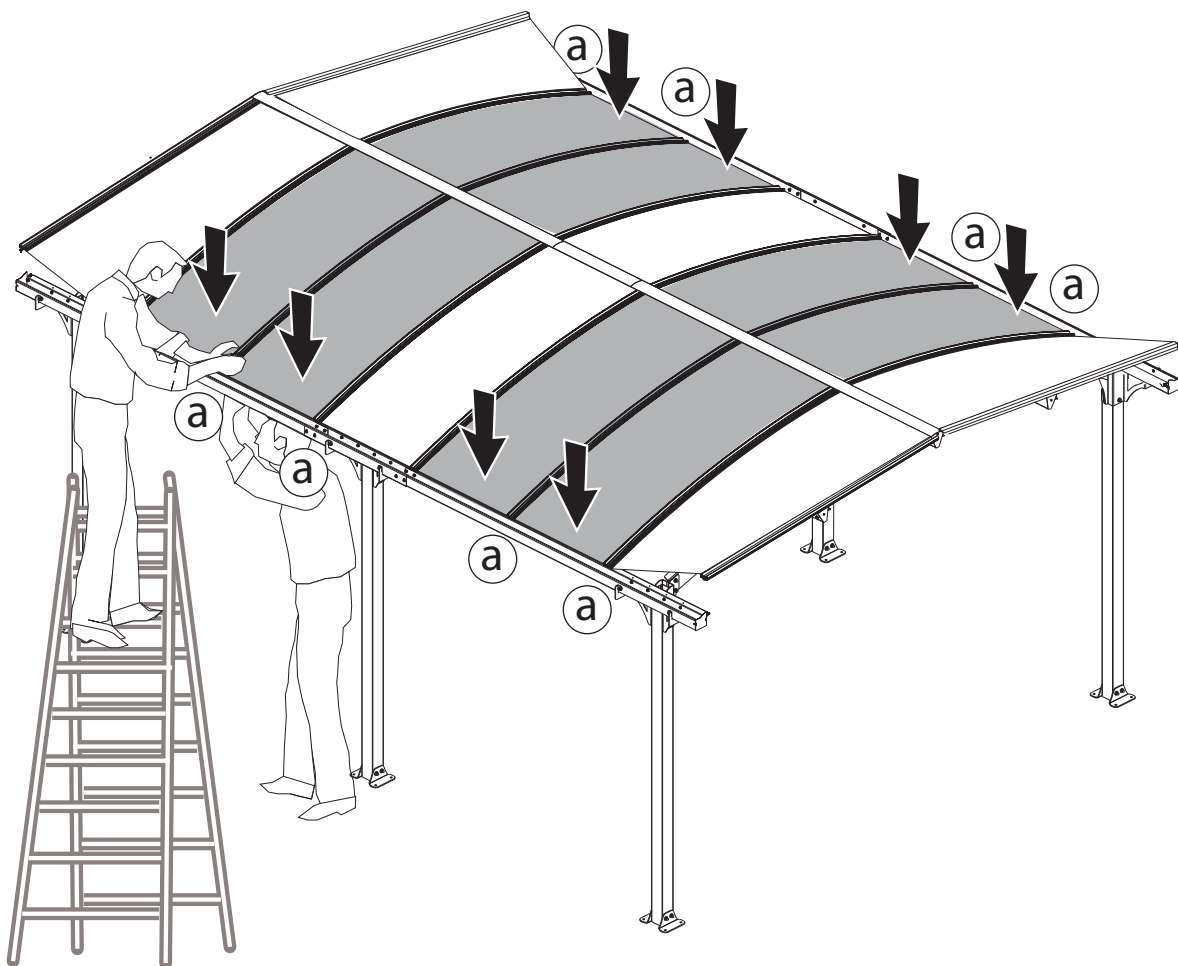

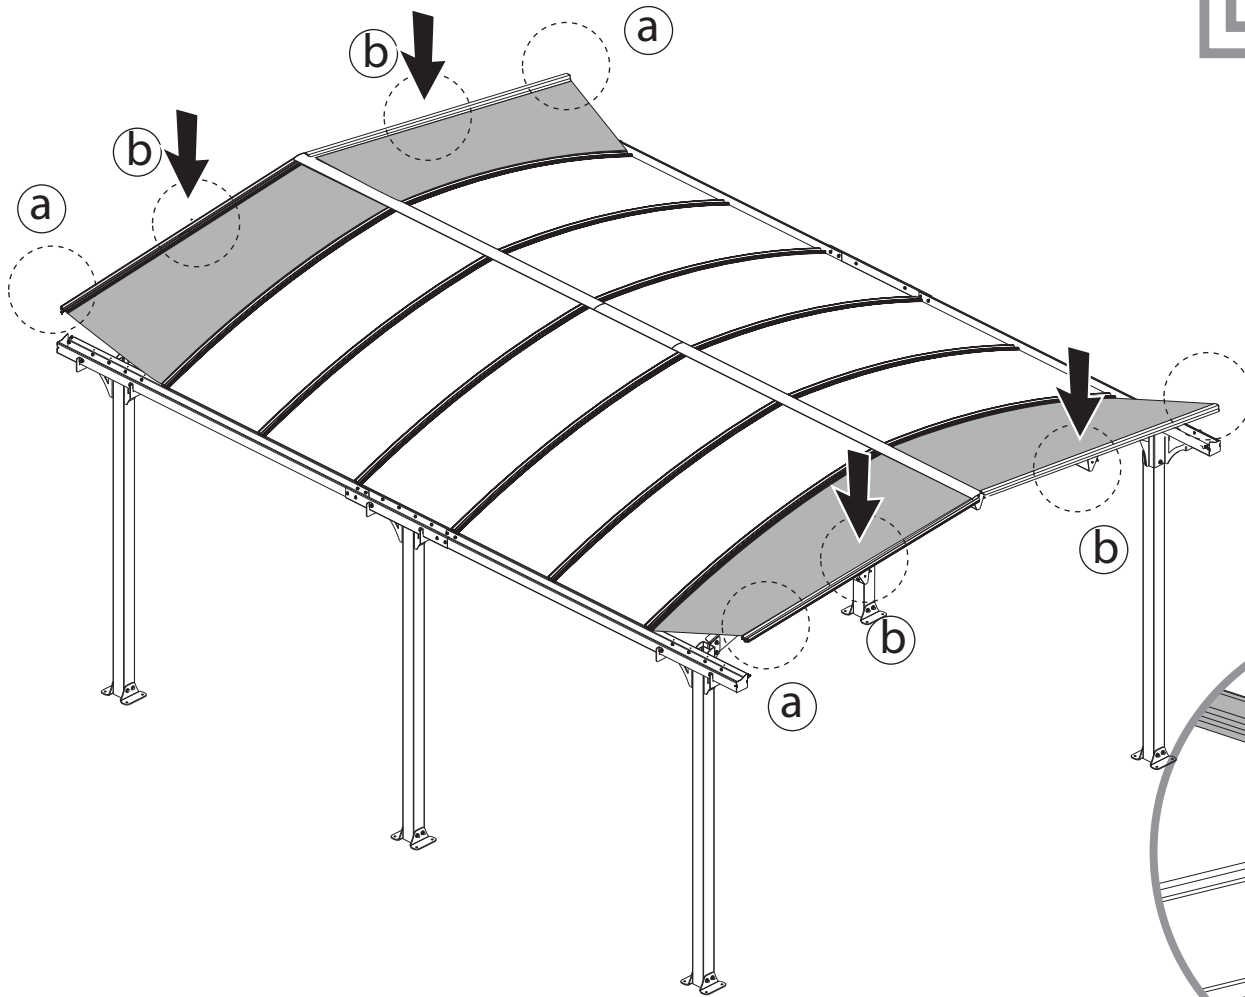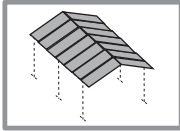



411




466








x8

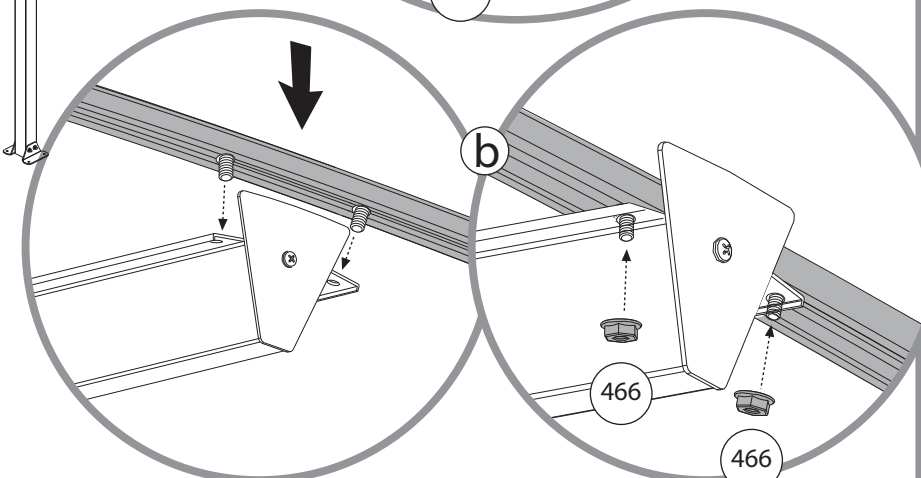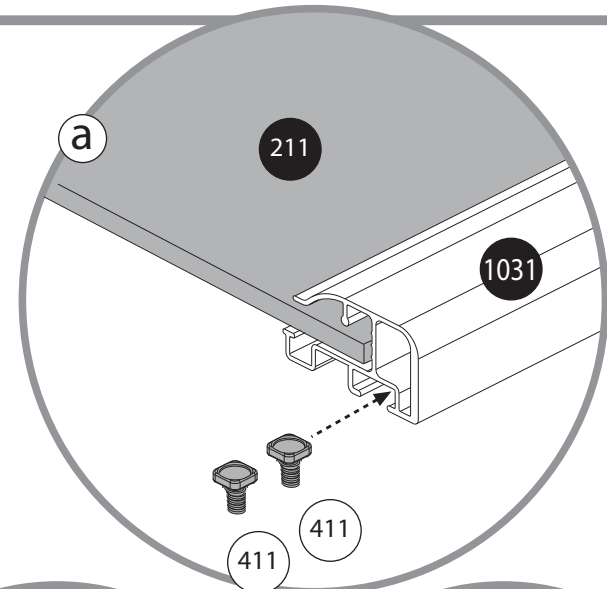
x8

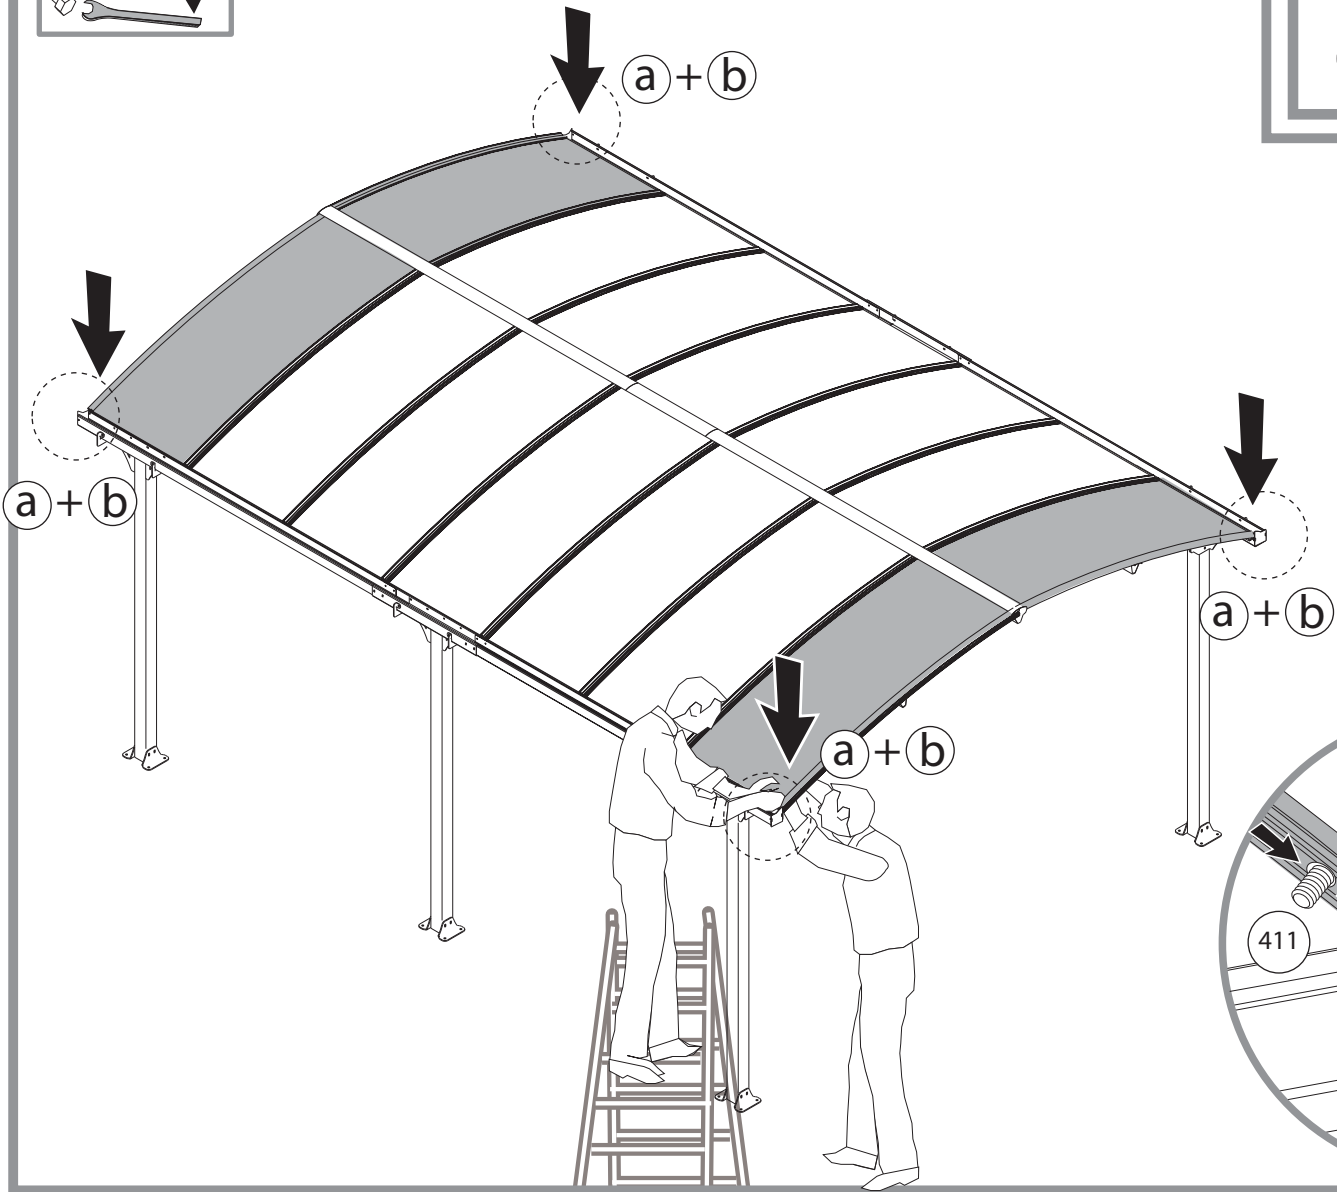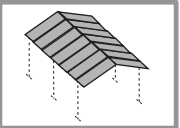




- 411  x4
- 466  x4

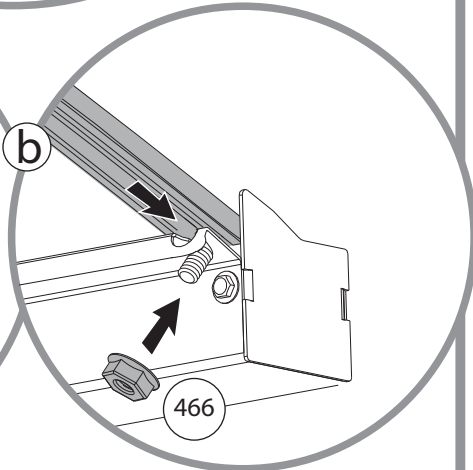
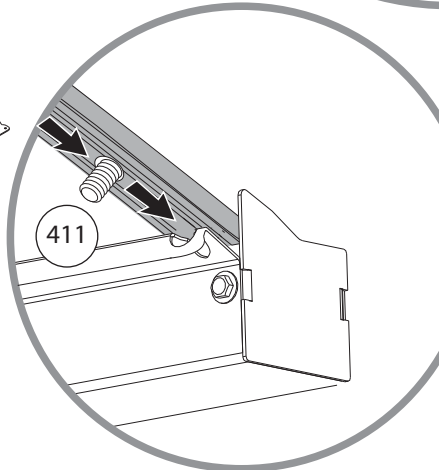
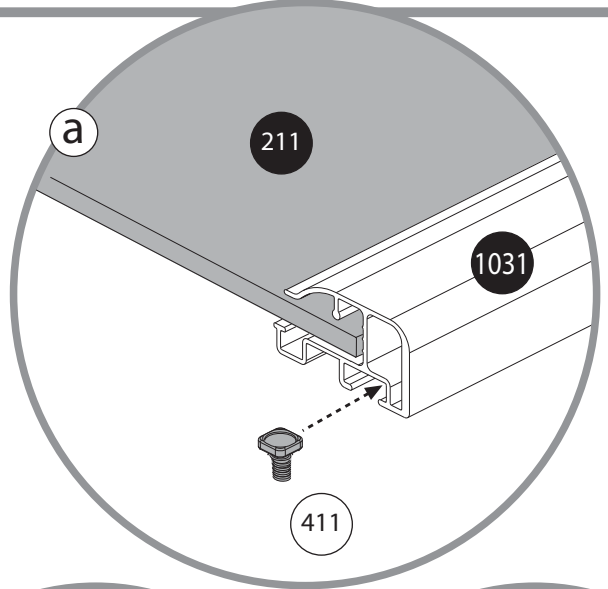


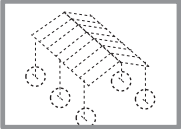

433  x22



4000  x22

4010  x22

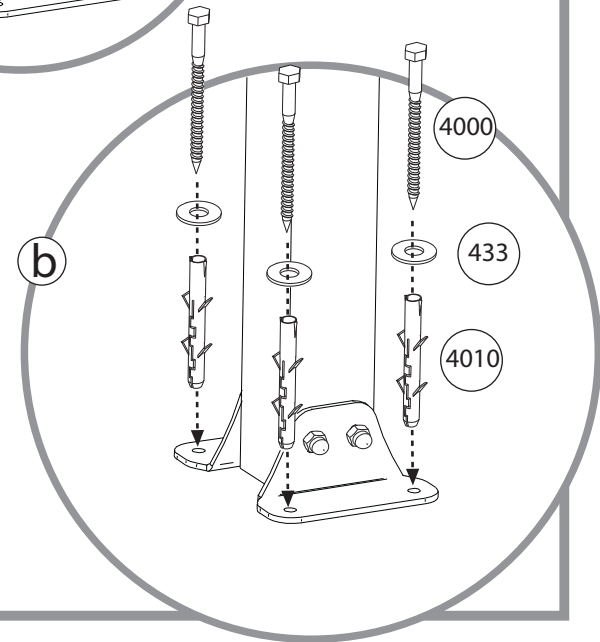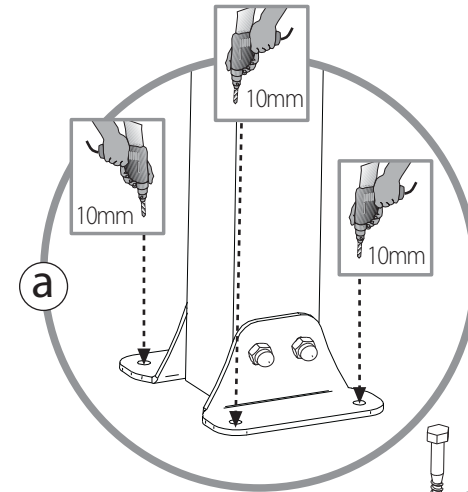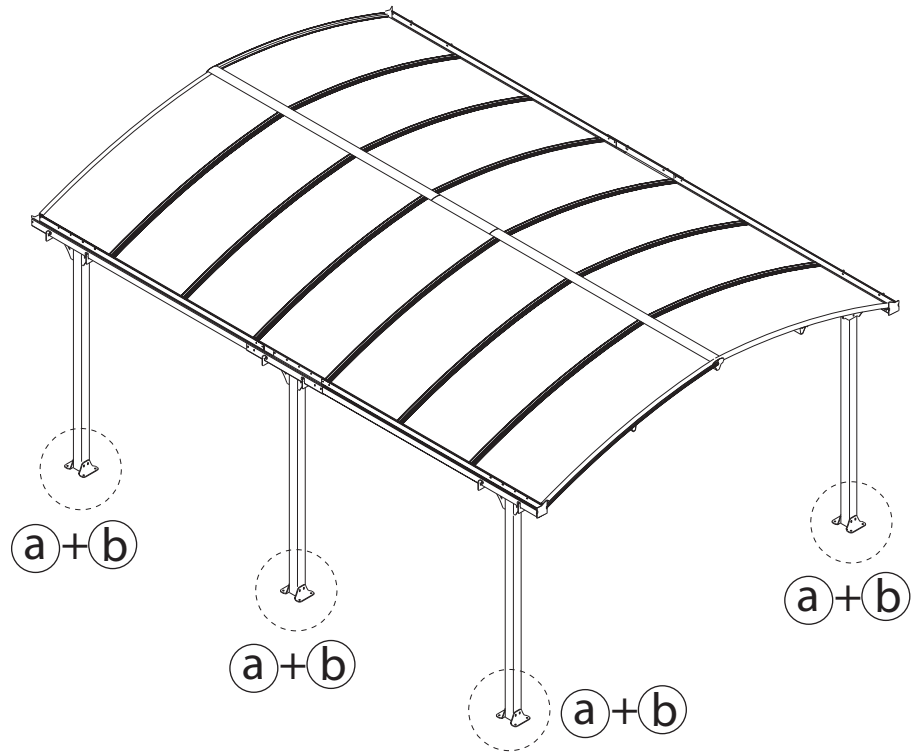



- 421 x56
- 427 x56
- 422 x56

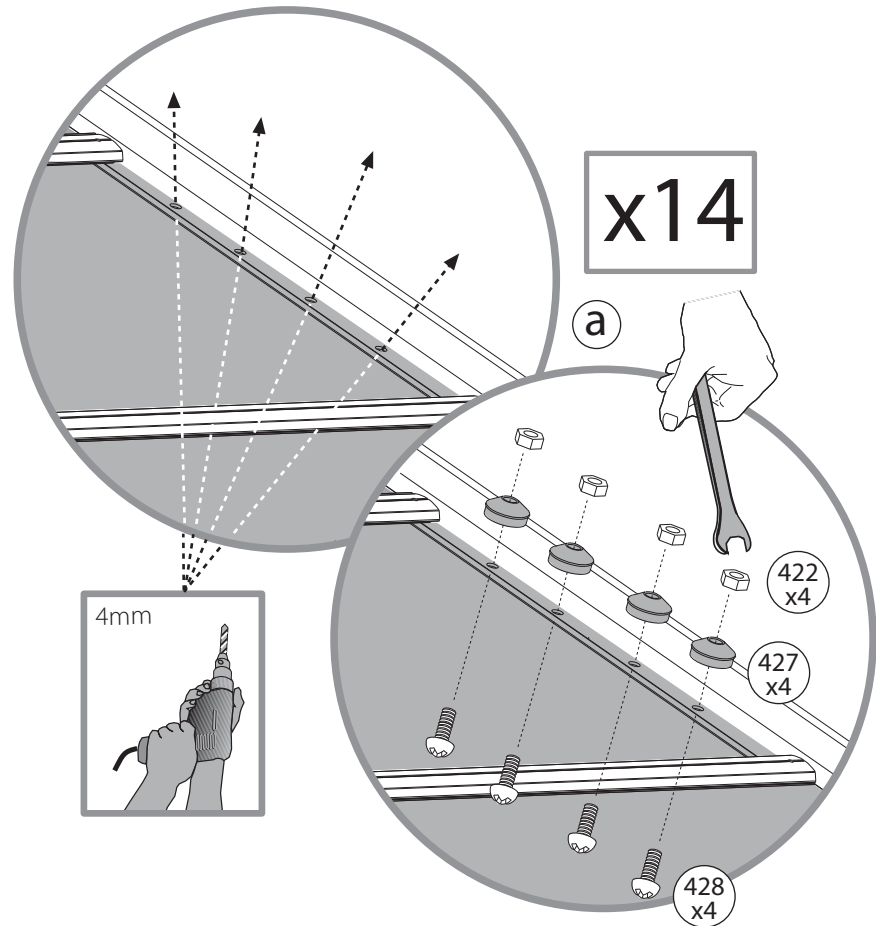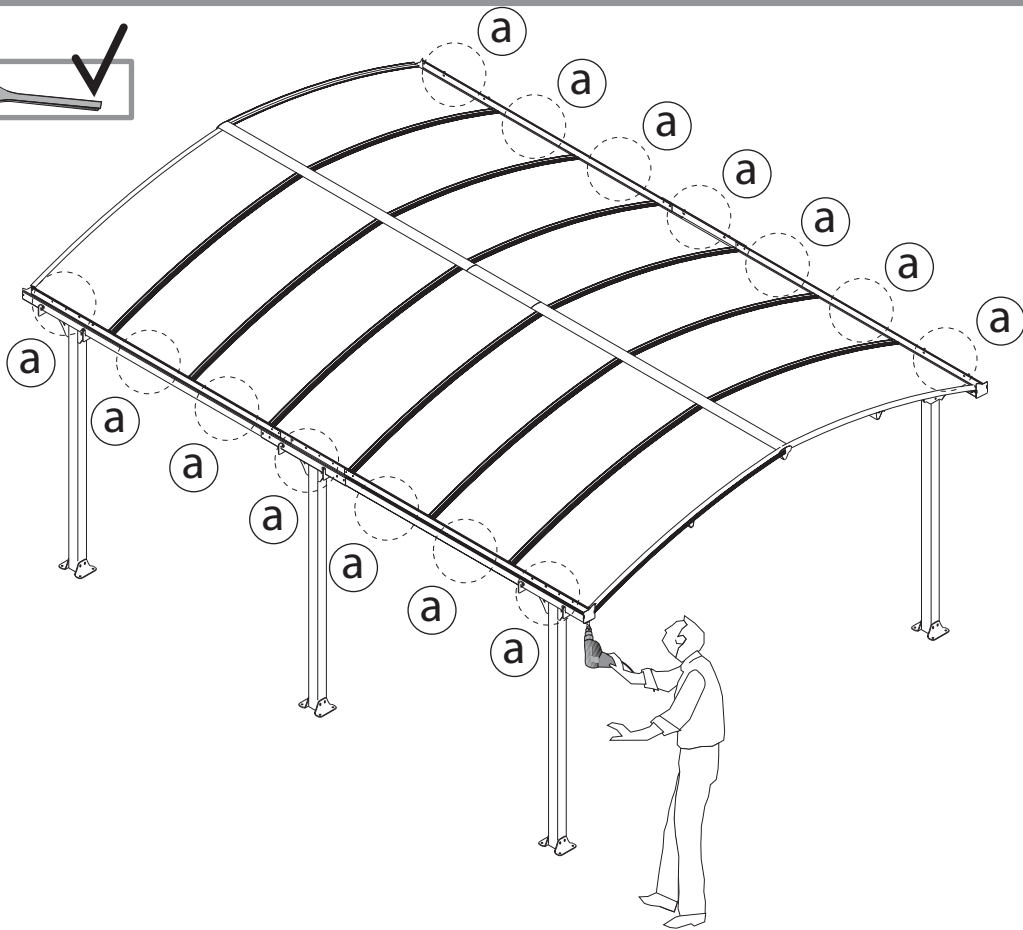

32 OPTION

